


Standard Pal system


Pal system that changes pallet by reducing hydraulic (air) clamp circuit pressure to zero

Pal coupler fitting stroke 1 mm

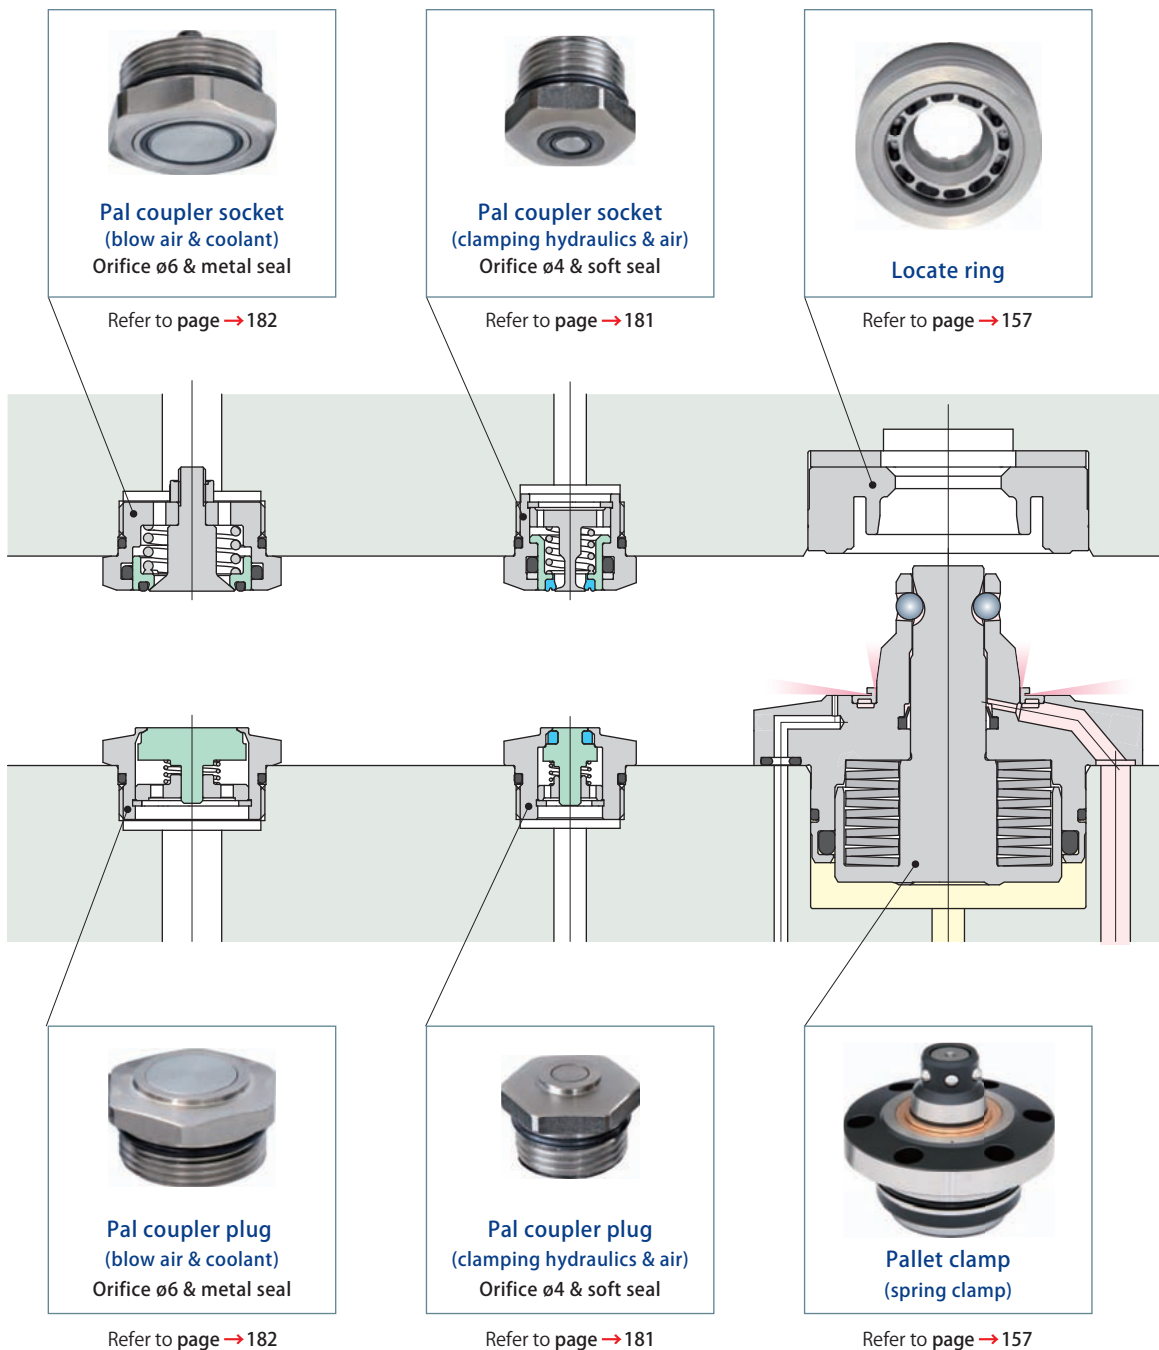


Select one of either spring clamp (model CPC) or hydraulic clamp (model CPH).

Pallet change

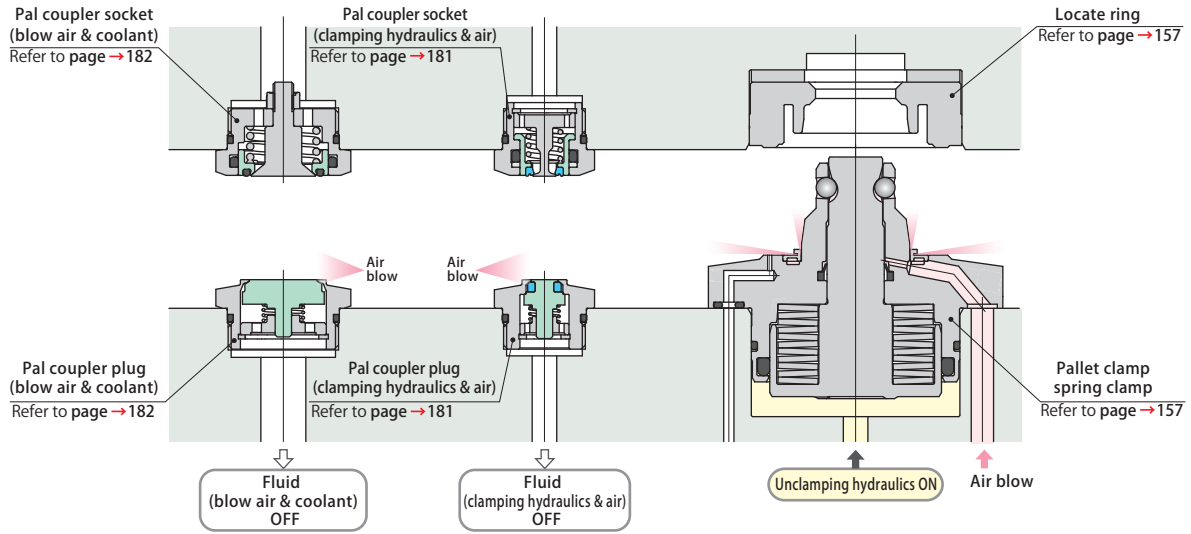


Pallet - unclamping & coupler disconnected

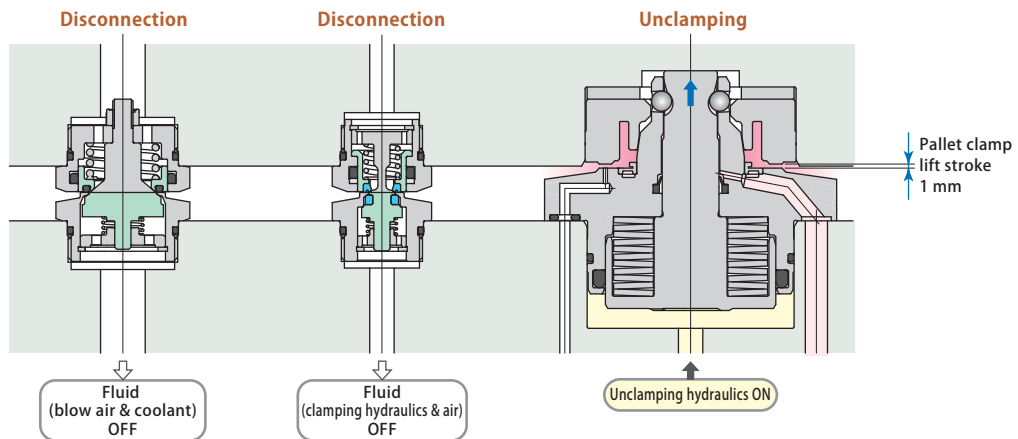

In pallet-unclamp, coupler disconnects due to lift stroke of pallet clamp.

Pallet - clamping & coupler connected

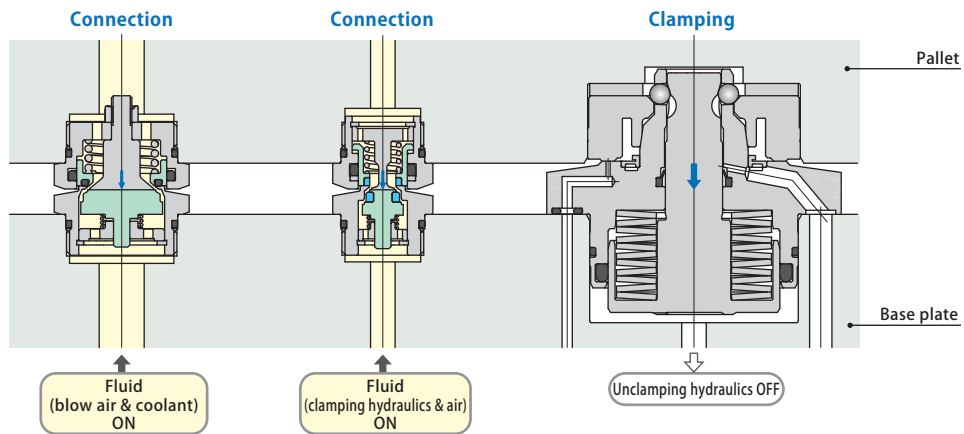

In pallet-clamp, coupler connects due to clamp stroke of pallet clamp.