

Sensing Swing clamp

Double acting 7 MPa

model **CTM**



3 point sensor model
model CTM06-LT



Clamp sensor model
model CTM06-LC



Unclamp sensor model
model CTM06-LB



Compact model
model CTM06-LN

Sensing Swing clamp model CTM

The extremely small sensing clamp can detect the loading miss and setting miss of a workpiece firmly.

3 point sensor model



Clamp sensor model




Unclamp sensor model




- Sensor model can prevent tool breakage and defective machining due to incomplete clamp. (Figure 1)
- Unclamp PAL sensor moves along with the piston rod and can positively detect unclamping point, thereby enabling a high-speed production line by fully synchronizing operation with workpiece lifters.
- Built-in sensors enable a compact and simple jig.
- Unclamp detection failure due to the metal chips deposit on an independent external detector can be reduced. (Figure 2)

Figure 1

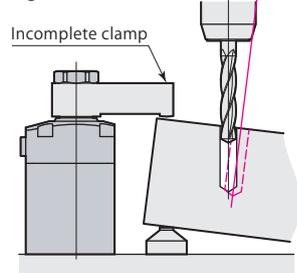


Machining failure due to incomplete clamp

Figure 2

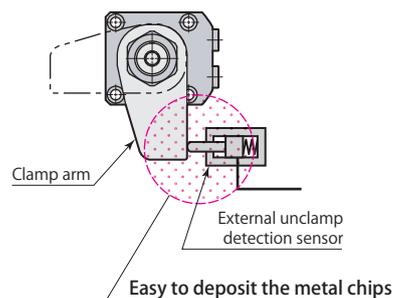

3 point sensor model

Clamp, Unclamp, Over clamp stroke (Incomplete clamp) detection


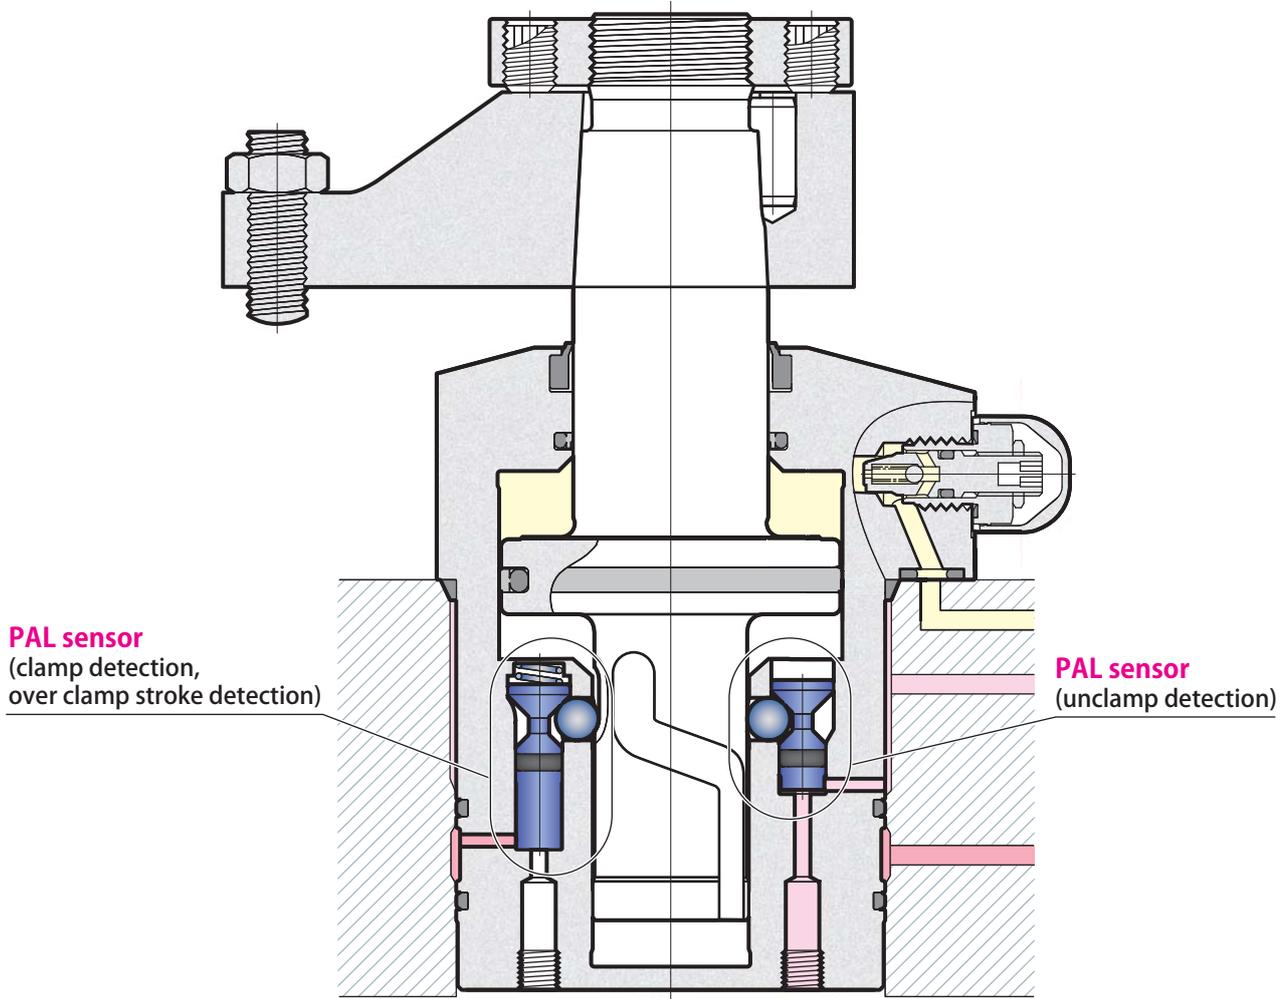


Clamp sensor model

Clamp, Over clamp stroke (Incomplete clamp) detection

Unclamp sensor model

Unclamp detection

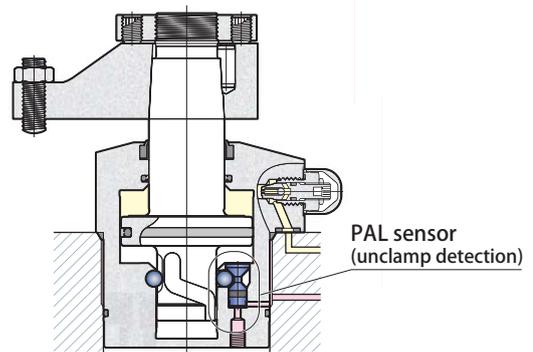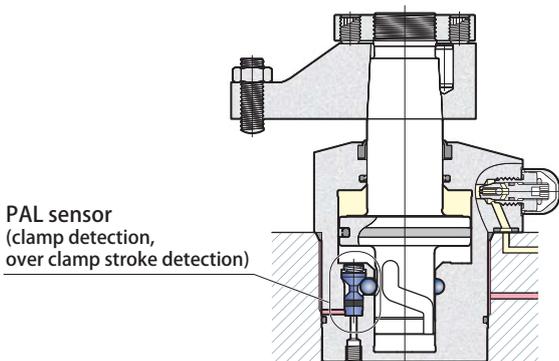

3 point sensor model T

Clamp, Unclamp, Over clamp stroke (Incomplete clamp) detection

model **CTM□-□□□T** PAT.



The 3 point sensor model can detect the status of clamp, unclamp and over clamp stroke with just 2 circuits of air. Refer to **pages →18-21** for the details.


Clamp sensor model C

Clamp, Over clamp stroke (Incomplete clamp) detection


model **CTM□-□□□C** PAT.




The clamp sensor model can detect the status of clamp and over clamp stroke with just 1 circuit of air. Refer to **pages →32-35** for the details.

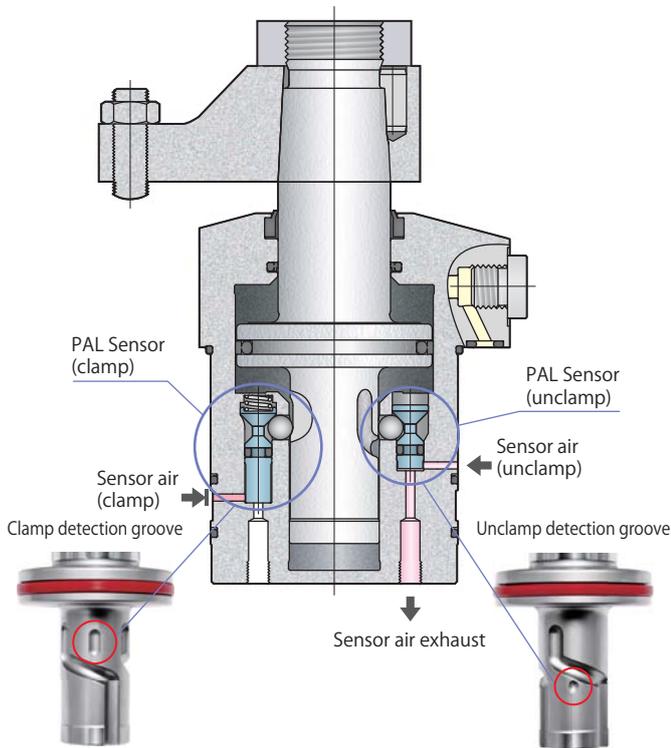


Hydraulic and pneumatic circuit diagram

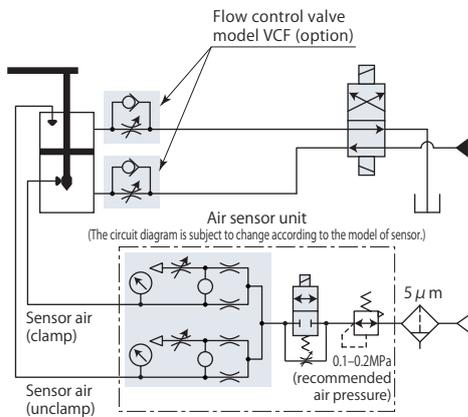

- Specifications page → 12
- Piping page → 13
- PAL sensor page → 18
- Short stroke page → 22
- Long stroke page → 26

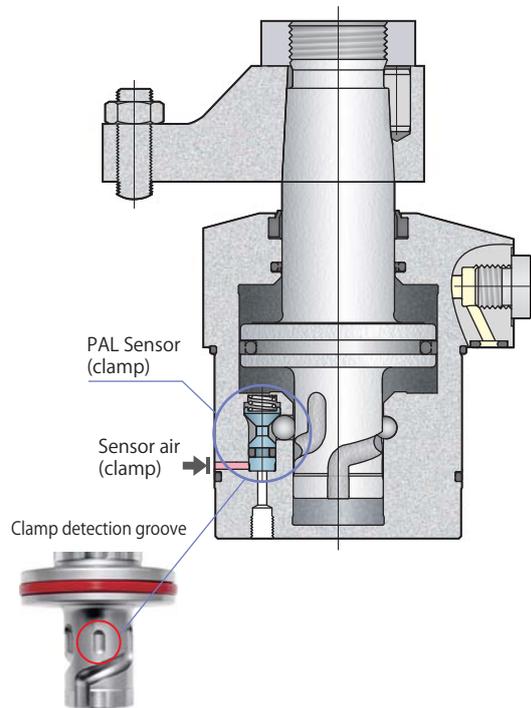


Hydraulic and pneumatic circuit diagram

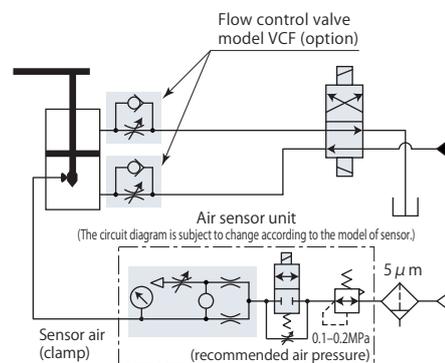


- Specifications page → 12
- Piping page → 13
- PAL sensor page → 32
- Short stroke page → 36
- Long stroke page → 40

Unclamp sensor model B

model **CTM□-□□□B** PAT.

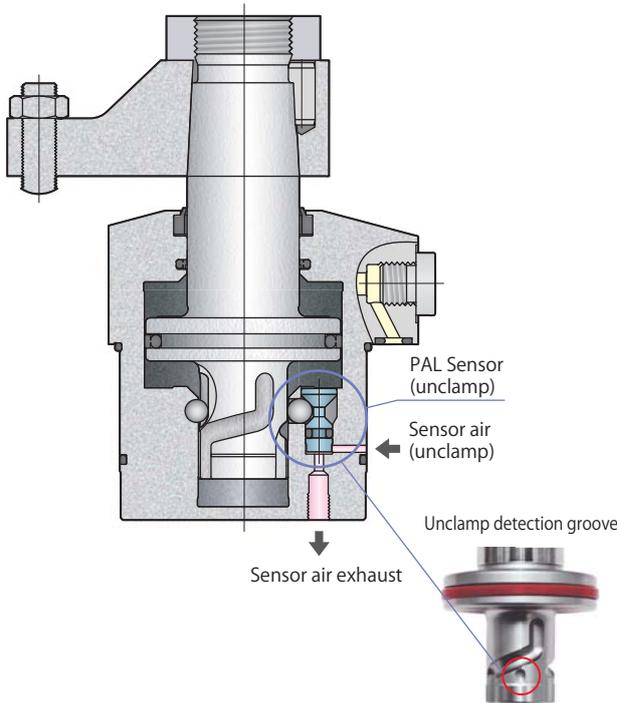

Hydraulic and pneumatic circuit diagram

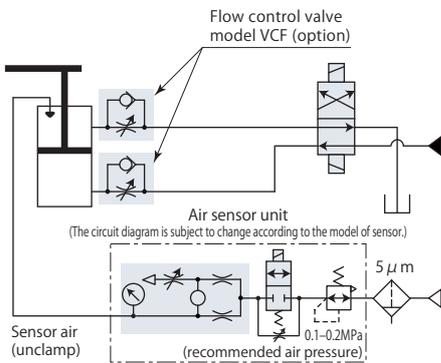


- Specifications page → 12
- Piping page → 13
- PAL sensor page → 47
- Short stroke page → 50
- Long stroke page → 54

Compact model N


model **CTM□-□□□N** J.PAT.



No sensors available on compact model

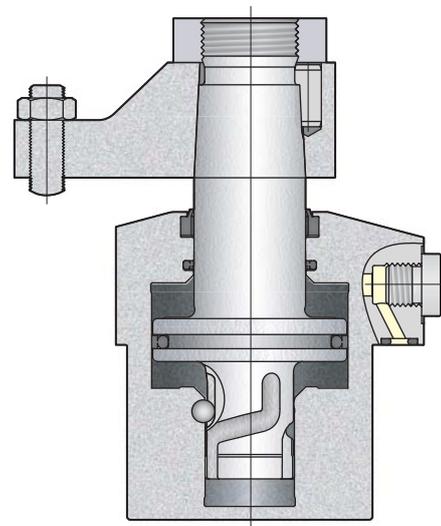

Hydraulic circuit diagram

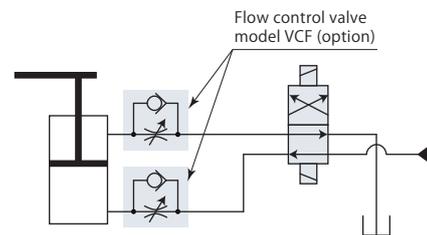

- Specifications page → 12
- Piping page → 13
- Short stroke page → 60
- Long stroke page → 64

Specifications

Size: **03***1, **04**, **05**, **06**, **10**, **16***2

Swing direction (when clamping): **L**: Counter-clockwise, **R**: Clockwise

Clamp stroke: **(Nil)**: 5mm, **S10**: 10mm, **S20***3: 20mm, **S30***3: 30mm


Sensors: **T**: 3 point sensor model (Clamp, Unclamp, Over clamp stroke (Incomplete clamp) detection), **C**: Clamp sensor model (Clamp, Over clamp stroke (Incomplete clamp) detection), **B**: Unclamp sensor model, **N**: Compact model

*1: For compact model only (CTM03-□□N).
 *2: For long stroke only (CTM16-□□□).
 *3: CTM□-□S20T, CTM□-□S20C, CTM□-□S30T, CTM□-□S30C are made to order.
 Contact Pascal for more details about swing angle 30, 45 and 60 degrees, pin rod and bottom piping.

Model	Size	CTM03			CTM04			CTM05			CTM06				CTM10				CTM16			
		Clamp stroke			5	10	20	5	10	20	5	10	20	30	5	10	20	30	10	20	30	
Cylinder force (hydraulic pressure 7MPa)	kN	2.5			3.5			4.9			7.2				9.4				14.2			
Cylinder inner diameter	mm	26			31			37			44				51				62			
Rod diameter	mm	15			18			22			25				30				35.5			
Effective area (clamp)	cm ²	3.5			5.00			6.95			10.3				13.4				20.3			
Swing angle		90° ± 3°																				
Positioning pin groove position accuracy		± 1°																				
Repeated clamp positioning accuracy		± 0.5°																				
Full stroke	CTM□-□□T, C	mm	-			12	17	27	13	18	28	14	19	29	39	15.5	20.5	30.5	40.5	22.5	32.5	42.5
	CTM□-□□B, N	mm	10.5	15.5	25.5	11.5	16.5	26.5	12.5	17.5	27.5	13.5	18.5	28.5	38.5	15	20	30	40	22	32	42
90° swing stroke	mm	5.5			6.5			7.5			8.5				10				12			
Over clamp stroke (CTM□-□□T, C)	mm	0.5																				
Mass	CTM□-□□T	kg	-			0.9	0.9	1.0	1.2	1.3	1.4	1.8	1.9	2.1	2.3	2.7	2.8	3.1	3.5	4.2	4.7	5.2
	CTM□-□□C	kg	-			0.8	0.8	1.0	1.1	1.2	1.4	1.6	1.7	2.0	2.3	2.4	2.6	3.0	3.4	4.1	4.6	5.1
	CTM□-□□B, N	kg	0.6	0.6	0.8	0.7	0.8	1.0	1.1	1.2	1.4	1.5	1.7	2.0	2.3	2.4	2.6	3.0	3.4	4.1	4.6	5.1
Recommended tightening torque of mounting screws	N·m	3.5			7			7			12				12				29			
Recommended tightening torque of nut	N·m	22			35			60			100				155				260			

- Pressure range: 1.5–7 MPa
- Proof pressure: 10.5 MPa
- Operating temperature: 0–70 °C
- Fluid used: General mineral based hydraulic oil (ISO-VG32 equivalent)
- Seals are resistant to chlorine-based cutting fluid. (not thermal resistant specification) * : ISO R898 class 12.9


Clamping must be done within the range of clamp stroke.

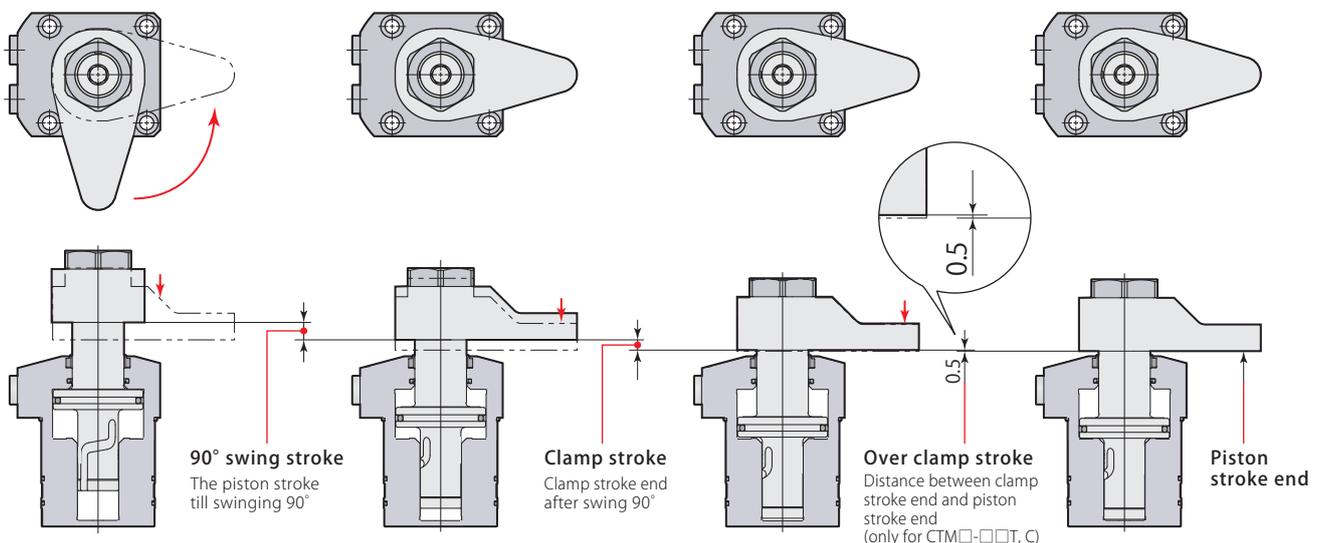

Manifold piping and G port piping are available.


Manifold piping

When choosing manifold piping, a flow control valve (model VCF) and an air bleeding valve (model VCE) are mountable on the G ports of the clamp.

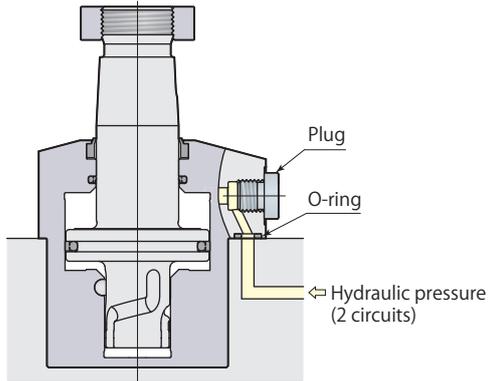


G port piping

Remove plugs when choosing G port piping. (O-ring must be used.) Refer to **page →220** for details on G port piping flareless fitting. The flow control valve and the air bleeding valve should be installed in the middle of oil path.

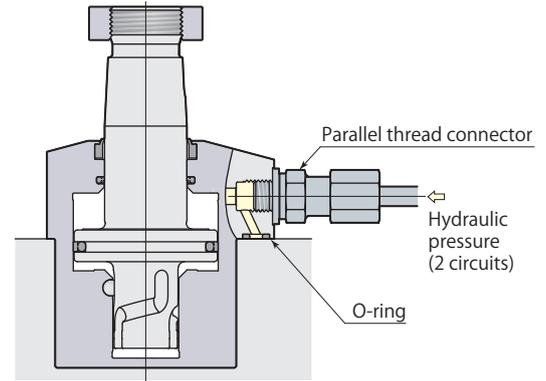


Flow control valve model VCF

Page →94

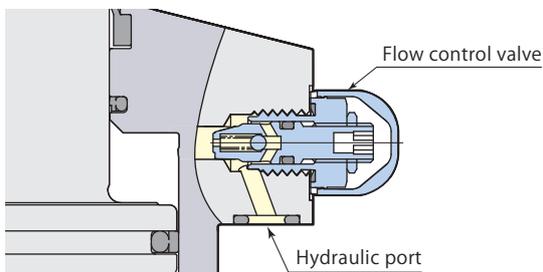

Air bleeding valve model VCE

Page →96

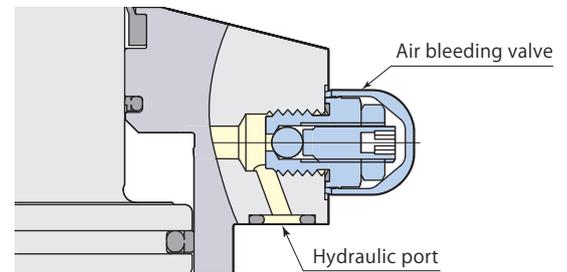

- In case of mounting flow control valve model VCF on the G port of the clamp, air bleeding valve should be installed in the piping to the clamp. (VCE Mounting details. Refer to **page →96**)

model **CTM03-□S** Clamping force $F=P/(2.82+0.0131 \times LH)$

Hydraulic pressure MPa	Cylinder force kN	Clamping force kN								Max. arm length Max. LH mm
		Clamp arm length LH mm								
		30	40	50	60	70	80	100	120	
7	2.5	2.2	2.1	2.0	1.9	1.9	1.8	1.7	Nonusable range	110
6.5	2.3	2.0	1.9	1.9	1.8	1.7	1.7	1.6	1.5	120
6	2.1	1.9	1.8	1.7	1.7	1.6	1.5	1.5	1.4	140
5.5	1.9	1.7	1.6	1.6	1.5	1.5	1.4	1.3	1.3	160
5	1.8	1.6	1.5	1.4	1.4	1.3	1.3	1.2	1.1	↑
4.5	1.6	1.4	1.3	1.3	1.2	1.2	1.2	1.1	1.0	↑
4	1.4	1.2	1.2	1.2	1.1	1.1	1.0	1.0	0.9	↑
3.5	1.2	1.1	1.0	1.0	1.0	0.9	0.9	0.8	0.8	↑
3	1.1	0.9	0.9	0.9	0.8	0.8	0.8	0.7	0.7	↑
2.5	0.9	0.8	0.7	0.7	0.7	0.7	0.6	0.6	0.6	↑
2	0.7	0.6	0.6	0.6	0.6	0.5	0.5	0.5	0.5	↑
1.5	0.5	0.5	0.4	0.4	0.4	0.4	0.4	0.4	0.3	160

model **CTM04-□S** Clamping force $F=P/(2.00+0.00755 \times LH)$

Hydraulic pressure MPa	Cylinder force kN	Clamping force kN								Max. arm length Max. LH mm
		Clamp arm length LH mm								
		40	50	60	70	80	100	120	140	
7	3.5	3.0	2.9	2.9	2.8					74
6.5	3.3	2.8	2.7	2.6	2.6	2.5			Nonusable range	81
6	3.0	2.6	2.5	2.4	2.4	2.3				90
5.5	2.8	2.4	2.3	2.2	2.2	2.1	2.0			101
5	2.5	2.2	2.1	2.0	2.0	1.9	1.8			116
4.5	2.3	2.0	1.9	1.8	1.8	1.7	1.6	1.5		135
4	2.0	1.7	1.7	1.6	1.6	1.5	1.5	1.4	1.3	163
3.5	1.8	1.5	1.5	1.4	1.4	1.3	1.3	1.2	1.1	↑
3	1.5	1.3	1.3	1.2	1.2	1.2	1.1	1.0	1.0	↑
2.5	1.3	1.1	1.1	1.0	1.0	1.0	0.9	0.9	0.8	↑
2	1.0	0.9	0.8	0.8	0.8	0.8	0.7	0.7	0.7	↑
1.5	0.8	0.7	0.6	0.6	0.6	0.6	0.5	0.5	0.5	163

model **CTM05-□S** Clamping force $F=P/(1.44+0.00543 \times LH)$

Hydraulic pressure MPa	Cylinder force kN	Clamping force kN								Max. arm length Max. LH mm
		Clamp arm length LH mm								
		50	60	80	100	120	140	160	180	
7	4.9	4.1	4.0	3.7	3.5					105
6.5	4.5	3.8	3.7	3.5	3.3				Nonusable range	117
6	4.2	3.5	3.4	3.2	3.0	2.9				131
5.5	3.8	3.2	3.1	2.9	2.8	2.6	2.5			150
5	3.5	2.9	2.8	2.7	2.5	2.4	2.3	2.2		175
4.5	3.1	2.6	2.5	2.4	2.3	2.2	2.0	1.9	1.9	209
4	2.8	2.3	2.3	2.1	2.0	1.9	1.8	1.7	1.7	261
3.5	2.4	2.0	2.0	1.9	1.8	1.7	1.6	1.5	1.4	↑
3	2.1	1.8	1.7	1.6	1.5	1.4	1.4	1.3	1.2	↑
2.5	1.7	1.5	1.4	1.3	1.3	1.2	1.1	1.1	1.0	↑
2	1.4	1.2	1.1	1.1	1.0	1.0	0.9	0.9	0.8	↑
1.5	1.0	0.9	0.8	0.8	0.8	0.7	0.7	0.6	0.6	261

model **CTM06-□S** Clamping force $F=P/(0.971+0.00333 \times LH)$

Hydraulic pressure MPa	Cylinder force kN	Clamping force kN								Max. arm length Max. LH mm
		Clamp arm length LH mm								
		50	60	80	100	120	140	160	180	
7	7.2	6.2	6.0	5.7	5.4					112
6.5	6.7	5.7	5.6	5.3	5.0	4.7			Nonusable range	124
6	6.2	5.3	5.1	4.8	4.6	4.4				139
5.5	5.7	4.8	4.7	4.4	4.2	4.0	3.8			159
5	5.1	4.4	4.3	4.0	3.8	3.6	3.5	3.3	3.2	184
4.5	4.6	4.0	3.8	3.6	3.5	3.3	3.1	3.0	2.9	220
4	4.1	3.5	3.4	3.2	3.1	2.9	2.8	2.7	2.5	274
3.5	3.6	3.1	3.0	2.8	2.7	2.6	2.4	2.3	2.2	↑
3	3.1	2.6	2.6	2.4	2.3	2.2	2.1	2.0	1.9	↑
2.5	2.6	2.2	2.1	2.0	1.9	1.8	1.7	1.7	1.6	↑
2	2.1	1.8	1.7	1.6	1.5	1.5	1.4	1.3	1.3	↑
1.5	1.5	1.3	1.3	1.2	1.2	1.1	1.0	1.0	1.0	274

model **CTM10-□S** Clamping force $F=P/(0.749+0.00238 \times LH)$

Hydraulic pressure MPa	Cylinder force kN	Clamping force kN								Max. arm length Max. LH mm
		Clamp arm length LH mm								
		60	80	100	120	140	160	180	200	
7	9.4	7.8	7.5	7.1						111
6.5	8.7	7.3	6.9	6.6	6.3				Nonusable range	123
6	8.0	6.7	6.4	6.1	5.8					138
5.5	7.3	6.2	5.9	5.6	5.3	5.1				157
5	6.7	5.6	5.3	5.1	4.8	4.6	4.4	4.2		181
4.5	6.0	5.0	4.8	4.6	4.3	4.2	4.0	3.8	3.7	215
4	5.3	4.5	4.3	4.1	3.9	3.7	3.5	3.4	3.3	265
3.5	4.7	3.9	3.7	3.5	3.4	3.2	3.1	3.0	2.9	↑
3	4.0	3.4	3.2	3.0	2.9	2.8	2.7	2.5	2.4	↑
2.5	3.3	2.8	2.7	2.5	2.4	2.3	2.2	2.1	2.0	↑
2	2.7	2.2	2.1	2.0	1.9	1.8	1.8	1.7	1.6	↑
1.5	2.0	1.7	1.6	1.5	1.4	1.4	1.3	1.3	1.2	265

model **CTM16-□S** Clamping force $F=P/(0.493+0.00138 \times LH)$


Hydraulic pressure MPa	Cylinder force kN	Clamping force kN								Max. arm length Max. LH mm
		Clamp arm length LH mm								
		60	80	100	120	140	160	180	200	
7	14.2	12.2	11.6	11.1	10.6					132
6.5	13.2	11.3	10.8	10.3	9.9	9.5			Nonusable range	147
6	12.2	10.4	9.9	9.5	9.1	8.7	8.4			164
5.5	11.2	9.6	9.1	8.7	8.4	8.0	7.7	7.4		187
5	10.1	8.7	8.3	7.9	7.6	7.3	7.0	6.7	6.5	217
4.5	9.1	7.8	7.5	7.1	6.8	6.6	6.3	6.1	5.9	259
4	8.1	6.9	6.6	6.3	6.1	5.8	5.6	5.4	5.2	↑
3.5	7.1	6.1	5.8	5.5	5.3	5.1	4.9	4.7	4.6	↑
3	6.1	5.2	5.0	4.8	4.6	4.4	4.2	4.0	3.9	↑
2.5	5.1	4.3	4.1	4.0	3.8	3.6	3.5	3.4	3.3	↑
2	4.1	3.5	3.3	3.2	3.0	2.9	2.8	2.7	2.6	↑
1.5	3.0	2.6	2.5	2.4	2.3	2.2	2.1	2.0	2.0	259

Swing speed adjustment

Swing time is restricted by the mass and length of the clamp arm (moment of inertia) since the 90° swing action impacts the cam shaft.

1. Calculate the moment of inertia according to the arm length and mass.
2. Adjust swing speed with flow control valve to ensure that 90° swing time of the clamp arm is greater than the shortest swing time in the graph shown below.


● The cam groove may be damaged in case the swing speed is set at the nonusable range in the graph.

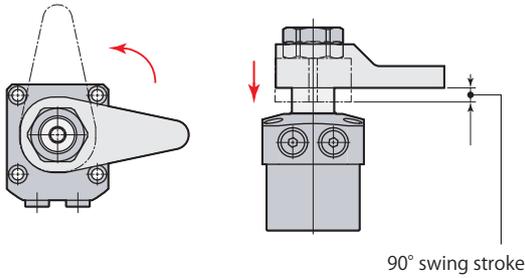

Example of calculation for moment of inertia


$$I = \frac{1}{12} m_1(4A_1^2 + B^2) + \frac{1}{12} m_2(4A_2^2 + B^2)$$

I : Moment of inertia (kg·m²)
m : Mass (kg)

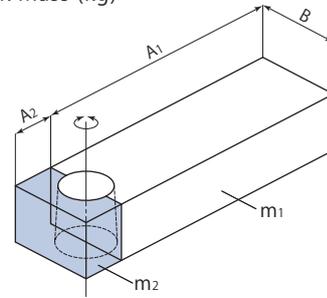


model CTM03

Shortest swing time calculation formula $t = \sqrt{\frac{I}{0.0136}}$

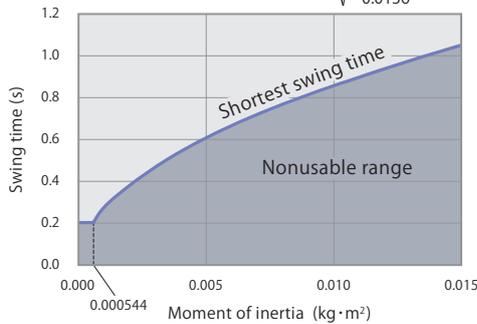


model CTM04

Shortest swing time calculation formula $t = \sqrt{\frac{I}{0.0171}}$

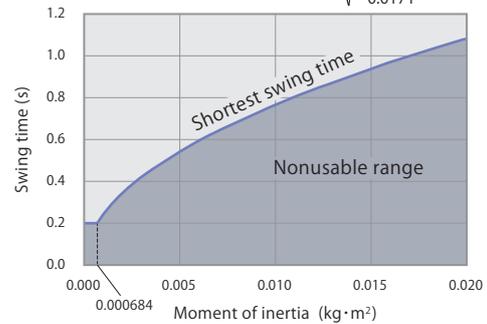


model CTM05

Shortest swing time calculation formula $t = \sqrt{\frac{I}{0.0198}}$

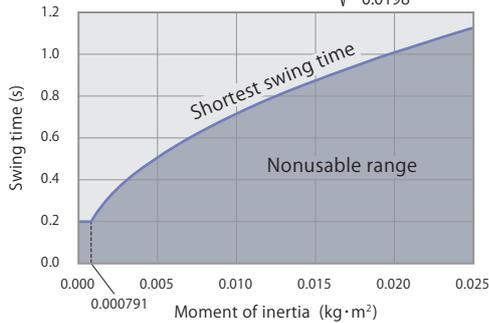


model CTM06

Shortest swing time calculation formula $t = \sqrt{\frac{I}{0.0410}}$

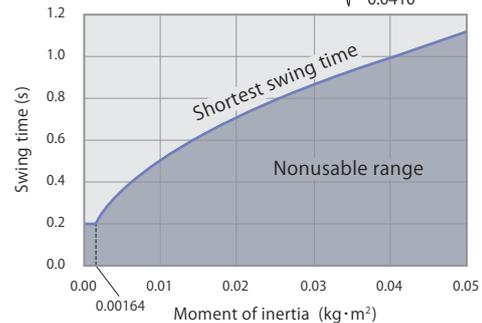


model CTM10



Shortest swing time calculation formula $t = \sqrt{\frac{I}{0.0490}}$

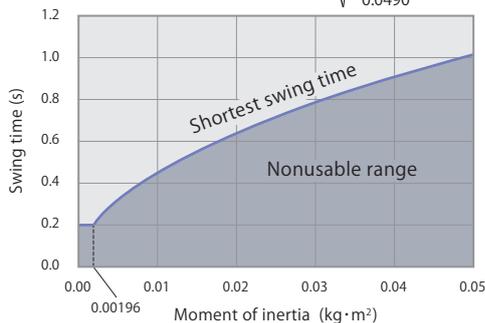



model CTM16

Shortest swing time calculation formula $t = \sqrt{\frac{I}{0.0975}}$

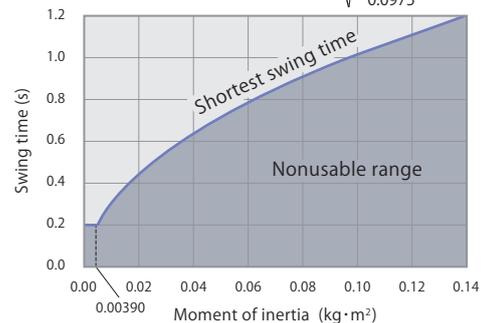

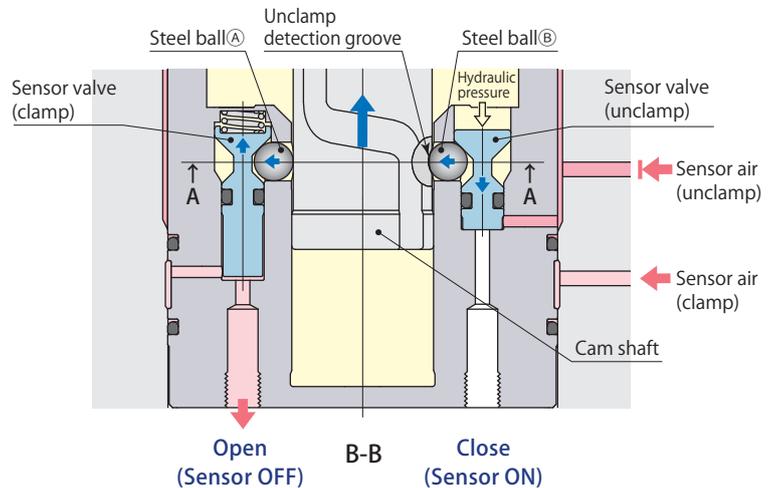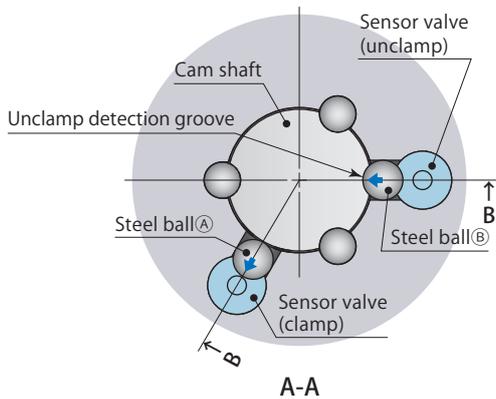PAL sensor function and structureUnclamp detection


- The steel ball (B) seats in the unclamp detection groove when the cam shaft reaches unclamp end, and a sensor valve (unclamp) is pushed down to shut off the sensor air by hydraulic force. The sensor valve (clamp) is pushed up by the steel ball (A) to open for air exhaust and detects the unclamped condition.

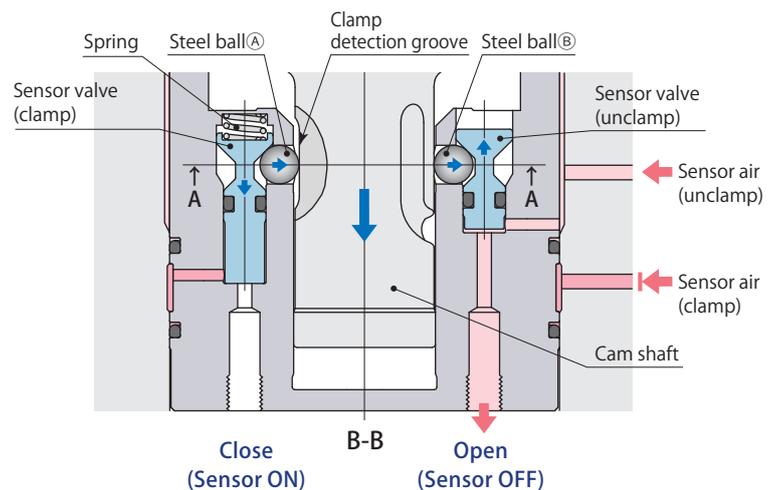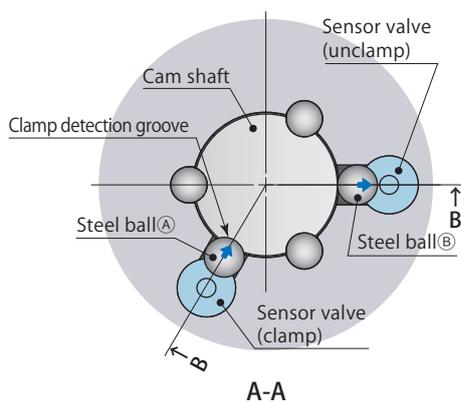Clamp detection

- The steel ball (A) seats in the clamp detection groove when the cam shaft reaches clamping point, and a sensor valve (clamp) is pushed down to shut of the sensor air by a spring. The sensor valve (unclamp) is pushed up by the steel ball (B) to open for air exhaust and detects the clamped condition.


PAL sensor function and structure

Over clamp stroke (Incomplete clamp) detection

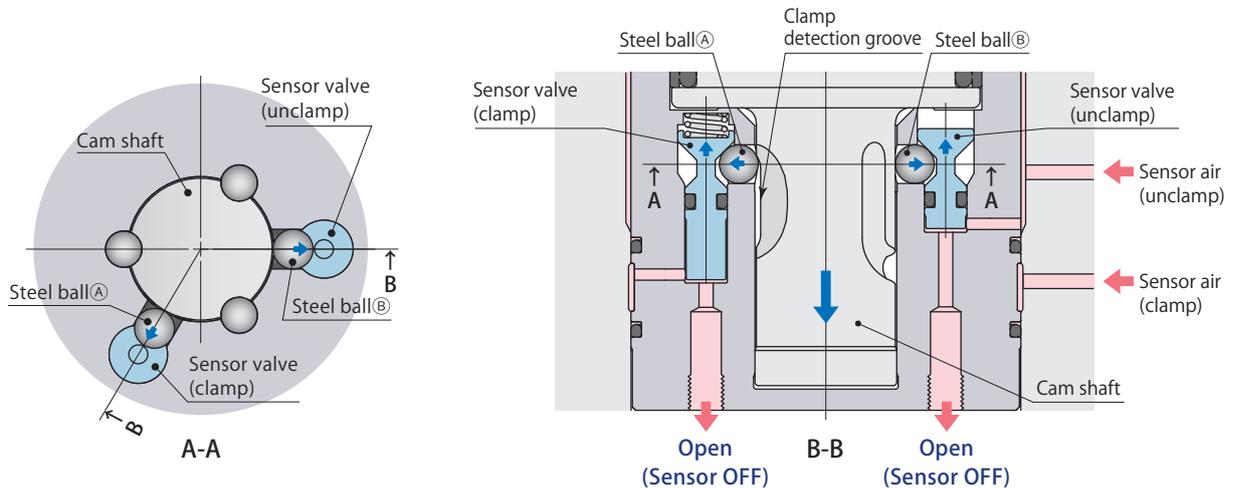

- When the cam shaft passes the clamping point, the sensor valve (clamp) is pushed up by the steel ball (A) to open for air exhaust. The sensor valve (unclamp) is pushed up by the steel ball (B) to open for air exhaust and detects the over clamp stroked (incomplete clamp) condition.


Over clamp stroke (Incomplete clamp) detection example

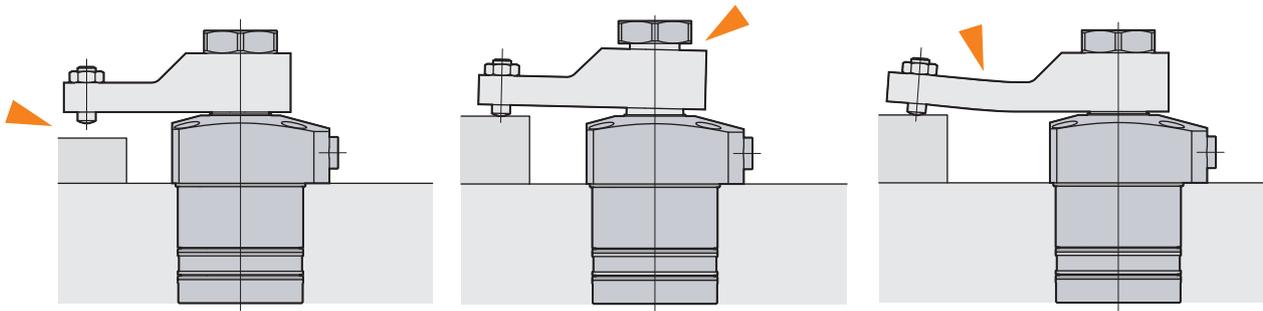

- Clamp disabled due to the abrasion on the tip of clamp arm during prolonged use.


Clamp, Unclamp, Over clamp stroke detection signal

Unclamp detection

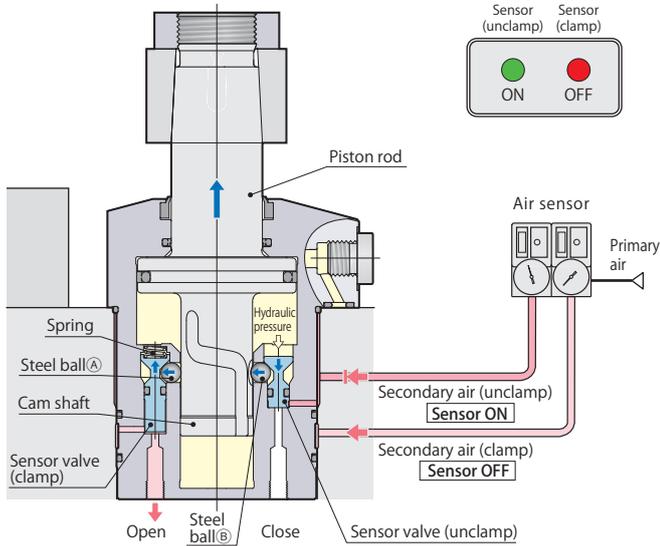


Sensor signal (unclamp)	ON	Unclamp
Sensor signal (clamp)	OFF	

In the middle of swing stroke

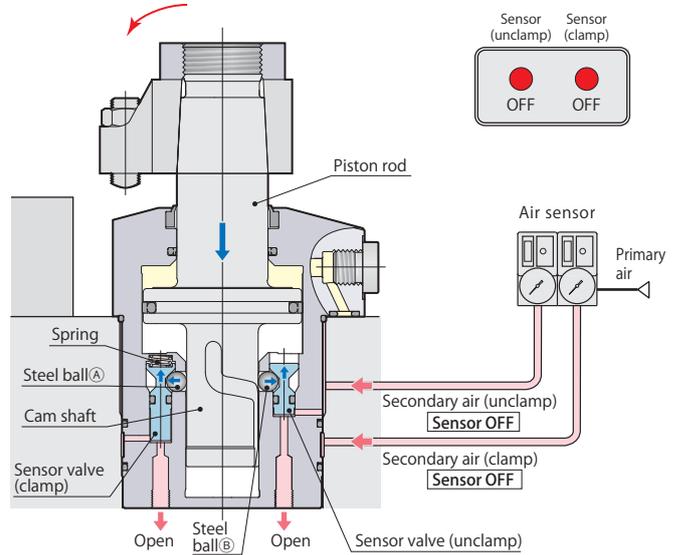


Sensor signal (unclamp)	OFF	In the middle of swing stroke
Sensor signal (clamp)	OFF	

Clamp detection

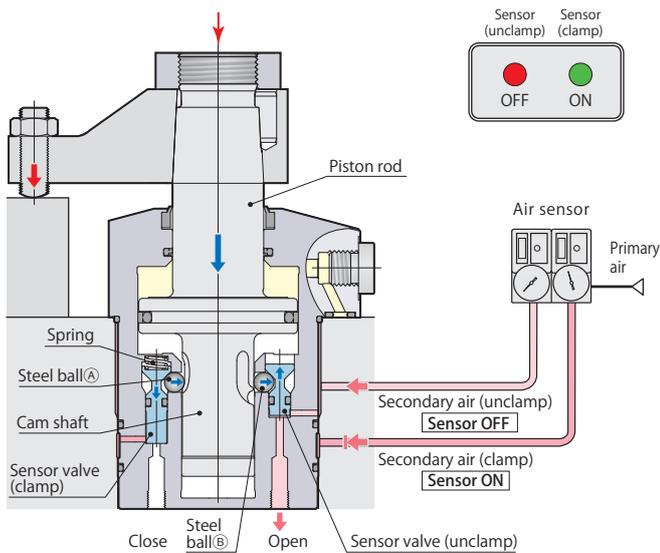

Sensor signal (unclamp)	OFF	Clamp
Sensor signal (clamp)	ON	


Over clamp stroke (Incomplete clamp) detection

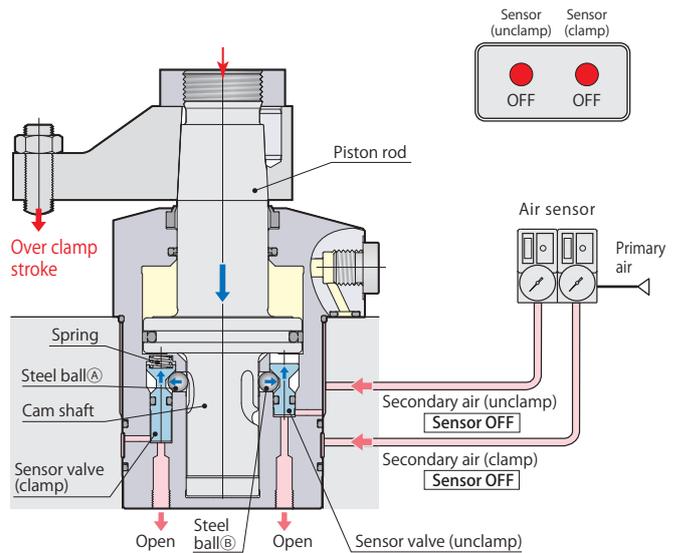

Sensor signal (unclamp)	OFF	Over clamp stroke (Incomplete clamp)
Sensor signal (clamp)	OFF	

Sensing Swing clamp 3 point sensor model CTM-T

Air sensor triggering point

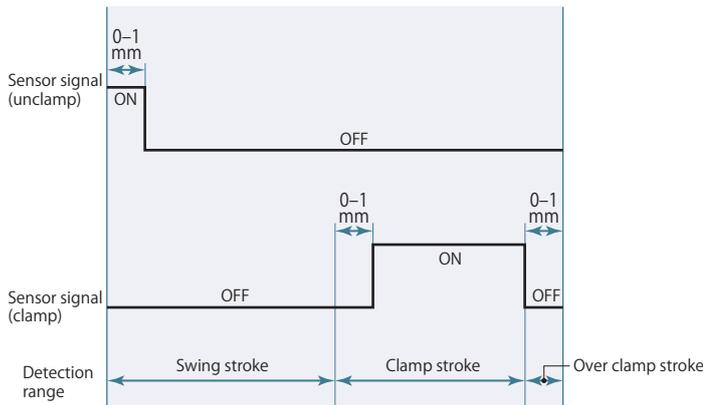



- Refer to the sensor supplier's instruction manual for the details of setting.
- Sensing performance such as detectable time and pressure differs depending on the supplier and model number of the sensor. Select the right model referring to sensor's application and characteristics.

Air sensor unit recommended condition of use

Supplier and model	ISA3-F/G series manufactured by SMC GPS2-05, GPS3-E series manufactured by CKD
Air supply pressure	0.1–0.2 MPa
Inner diameter of piping	ø4 mm (ISA3-F:ø2.5 mm)
Overall piping length	5 m or less

- Supply the dry and filtered air. Particulate size $5\ \mu\text{m}$ or less is recommended.
- Use a solenoid valve with needle for air sensor unit and control it supplying air all the time in order to eliminate intrusion of chips or coolant.
- There is a case that air sensing cannot be successfully made as designed when it is used out of the above usage. Contact Technical service center for more details.

Relation between sensor air pressure, PAL sensor and piston stroke

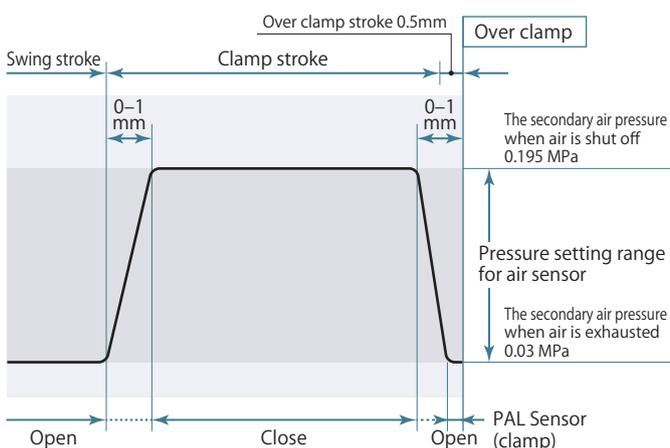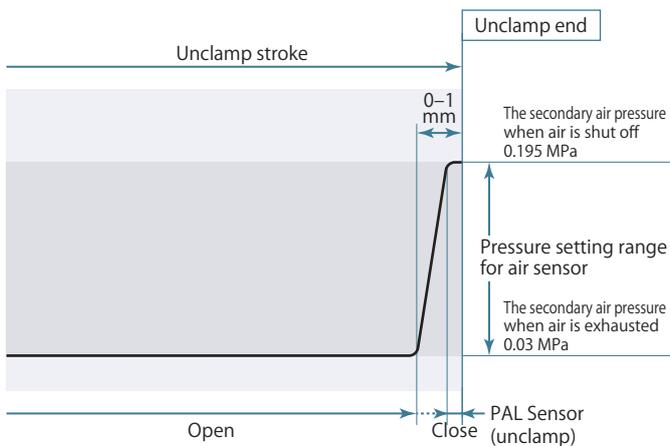


The diagram shown on the left indicates the relation between the PAL sensor, piston stroke, and secondary air pressure. (The pressure shown in the diagram is a reference based on the 0.2 MPa of primary air pressure for one piece of clamp.)

Since the new PAL sensor works with less air-leakage compared to previous sensor valve,


- Enhances the pressure setting range of the sensor which enables the sensor to set easily. (Ex. Pressure setting range 0.03–0.195 MPa in the diagram)
- Allows the use for a number of clamps by one air sensor because of better pressure holding when air is shut off. (Maximum number of clamps to be detected by one sensor is 10.)
- Allows to choose less air-consumed, i.e. small orifice diameter type, air sensor.
- Can create large differential-pressure when opening and closing the PAL sensor so that sensor primary pressure can be set as low as possible and reduce the consumption of air.

New PAL sensor

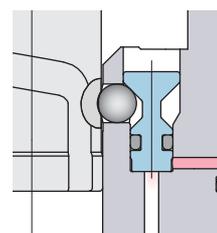

Poppet structure ensures superior sealing performance and can create large differential-pressure when the valve is opening and closing, and air leakage can be minimized.


Previous sensor valve

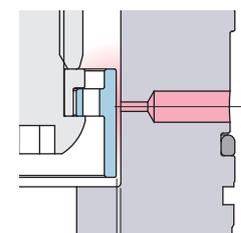

Air leaks easily due to a large space.

Dimensions


CTM□-□S10T

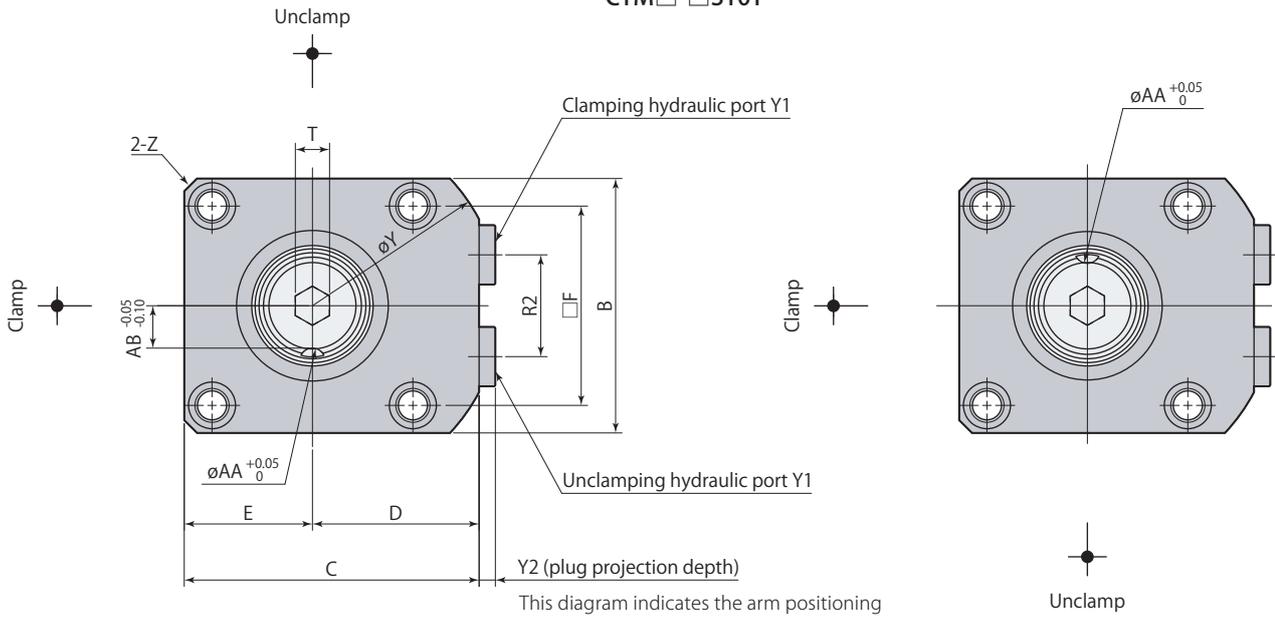

This diagram indicates the arm positioning pin groove at unclamped condition.


Swing direction L (counter-clockwise)

Swing direction R (clockwise)

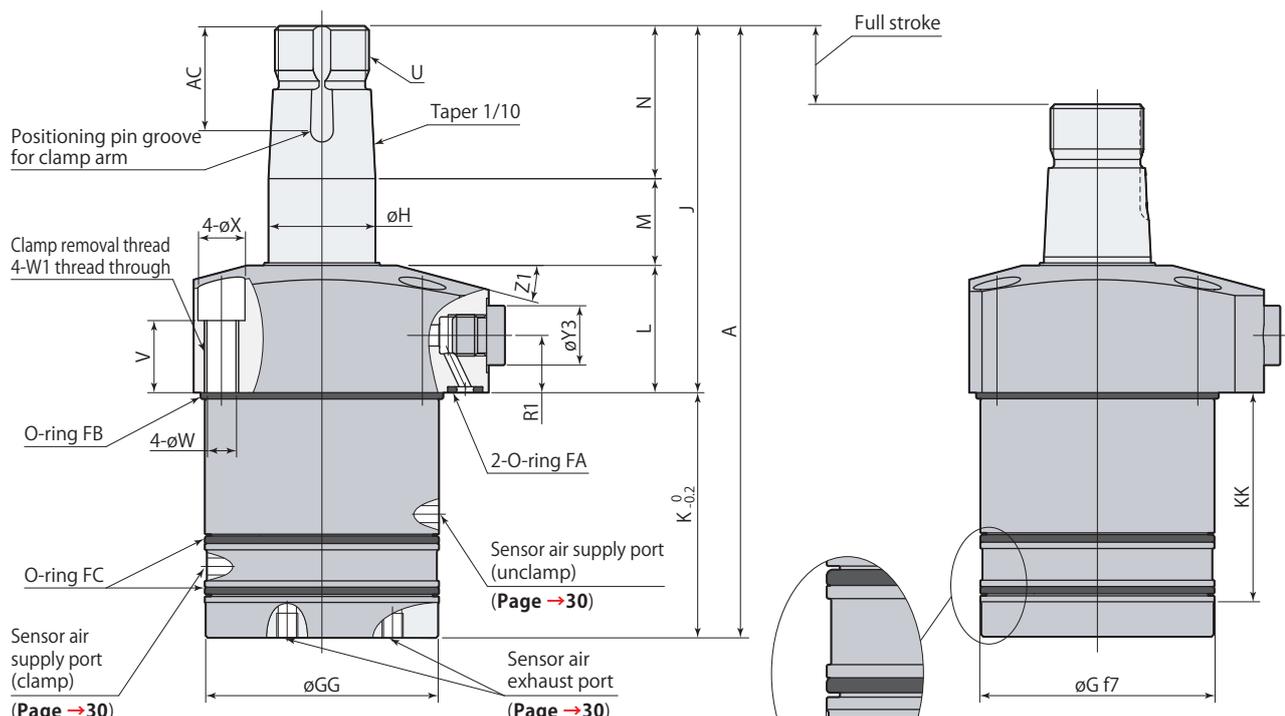

Unclamp

Stroke end

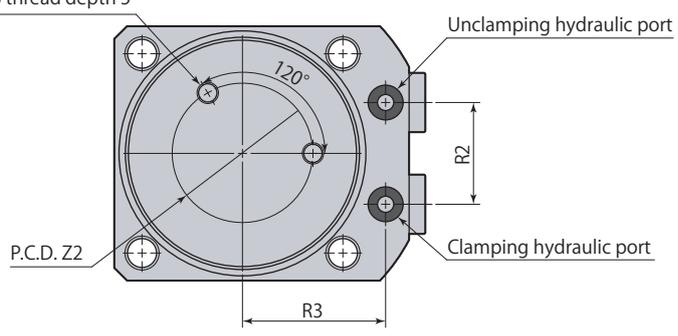

- Hex nut for arm mount is included.
- Refer to **page →72** for the details of perfect nut.
- Clamp arm, positioning pin and mounting screws are not included.

Model		CTM04-□S10T	CTM05-□S10T	CTM06-□S10T	CTM10-□S10T	CTM16-□S10T
Cylinder capacity (cm ³)	Clamp	8.5	12.5	19.6	27.4	45.7
	Unclamp	12.8	19.4	28.9	41.9	67.9
A		123.5	130.5	144.5	156	177
B		45	51	60	70	80
C		54	61	69	81	92
D		31.5	35.5	39	46	52
E		22.5	25.5	30	35	40
F		34	40	47	55	63
øG		40 ^{-0.025 -0.050}	48 ^{-0.025 -0.050}	55 ^{-0.030 -0.060}	65 ^{-0.030 -0.060}	75 ^{-0.030 -0.060}
øGG		39.7	47.6	54.6	64.6	74.6
øH		18	22	25	30	35.5
J		70.5	79.5	86.5	93	108
K		53	51	58	63	69
KK		46.5	42.5	49	51.5	56.5
L		25	28	30	31	38
M		18.5	19.5	20.5	22	24
N		27	32	36	40	46
P		8	9	10	11	11
R1		12.5	14	13.5	14	16
R2		18	22	24	30	32
R3		26	30	33.5	39.5	45
S (nut width across flats)		24	30	32	41	46
T (hex socket)		6	8	8	10	10
U		M16×1.5	M20×1.5	M22×1.5	M27×1.5	M30×1.5
V		15	17.5	17	17	21
øW		5.5	5.5	6.8	6.8	9
W1		M6×1	M6×1	M8×1.25	M8×1.25	M10×1.5
øX		9	9	11	11	14
øY		73	83	88	106	116
Y1		G1/8	G1/8	G1/8	G1/8	G1/4
Y2		3.8	3.8	3.8	3.8	4.8
øY3		14	14	14	14	19
Z		C3	C3	C3	C4	C5
Z1		12°	15°	15°	15°	15°
Z2		22	27	33	38	45
øAA (pin groove diameter)		4	5	6	6	8
AB		7	9	10	12.5	14
AC		18.5	21.5	24.5	27.5	28.5
Positioning pin (dowel pin)		ø4(h8)×10	ø5(h8)×12	ø6(h8)×14	ø6(h8)×16	ø8(h8)×16
O-ring FA (fluorocarbon hardness Hs90)		P5	P5	P5	P7	P7
O-ring FB (fluorocarbon hardness Hs70)		38×1.5 (inner diameter×thickness)	AS568-031	AS568-034	AS568-037	AS568-040
O-ring FC (fluorocarbon hardness Hs70)		AS568-028	AS568-031	AS568-033	AS568-036	AS568-039
Taper sleeve		CTH04-MS	CTH05-MS	CTH06-MS	CTH10-MS	CTH16-MS
Flow control valve*	Meter-in	VCF01S	VCF01S	VCF01S	VCF01	VCF02
	Meter-out	VCF01S-O	VCF01S-O	VCF01S-O	VCF01-O	VCF02-O
Air bleeding valve		VCE01	VCE01	VCE01	VCE01	VCE02

*: Select the right model of VCF and VCE according to the size of the clamp.

Refer to each page for the details of options.


● Taper sleeve page →70

● Flow control valve page →94

● Air bleeding valve page →96

Dimensions

CTM□-□S20T

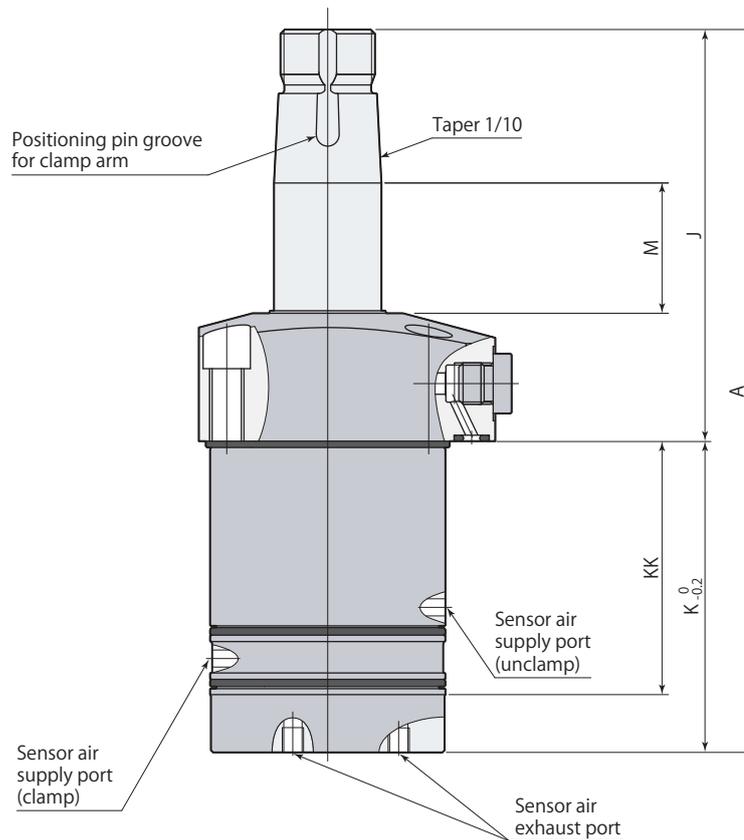

Unclamp

Model		CTM04-□S20T	CTM05-□S20T	CTM06-□S20T	CTM10-□S20T	CTM16-□S20T
Cylinder capacity (cm ³)	Clamp	13.5	19.5	29.9	40.7	66.0
	Unclamp	20.4	30.1	44.1	62.3	98.1
A		148.5	155.5	169.5	181	205
J		80.5	89.5	96.5	103	118
K		68	66	73	78	87
KK		56.5	52.5	59	61.5	66.5
M		28.5	29.5	30.5	32	34

mm

● Refer to **pages →26, 27** for other dimensions that are not shown in the diagram.


Refer to each page for the details of options.

● Taper sleeve **page →70** ● Flow control valve **page →94** ● Air bleeding valve **page →96**

● This product is made to order.

Dimensions

CTM□-□S30T

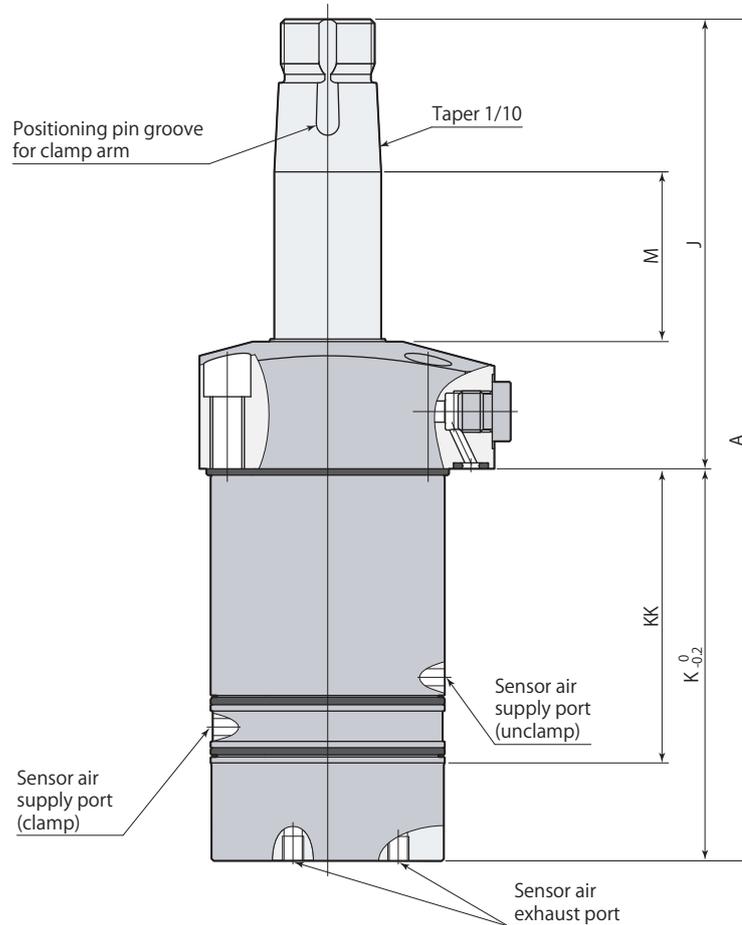Unclamp

Model		CTM06-□S30T	CTM10-□S30T	CTM16-□S30T
Cylinder capacity (cm ³)	Clamp	40.2	54.1	86.2
	Unclamp	59.3	82.7	128.3
A		199.5	211	235
J		106.5	113	128
K		93	98	107
KK		69	71.5	76.5
M		40.5	42	44

mm




● Refer to **pages →26, 27** for other dimensions that are not shown in the diagram.

Refer to each page for the details of options.

● Taper sleeve **page →70** ● Flow control valve **page →94** ● Air bleeding valve **page →96**

● This product is made to order.

Mounting details

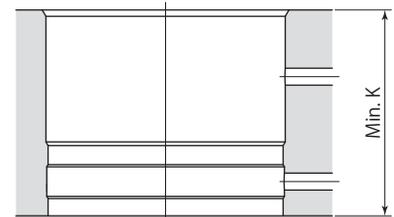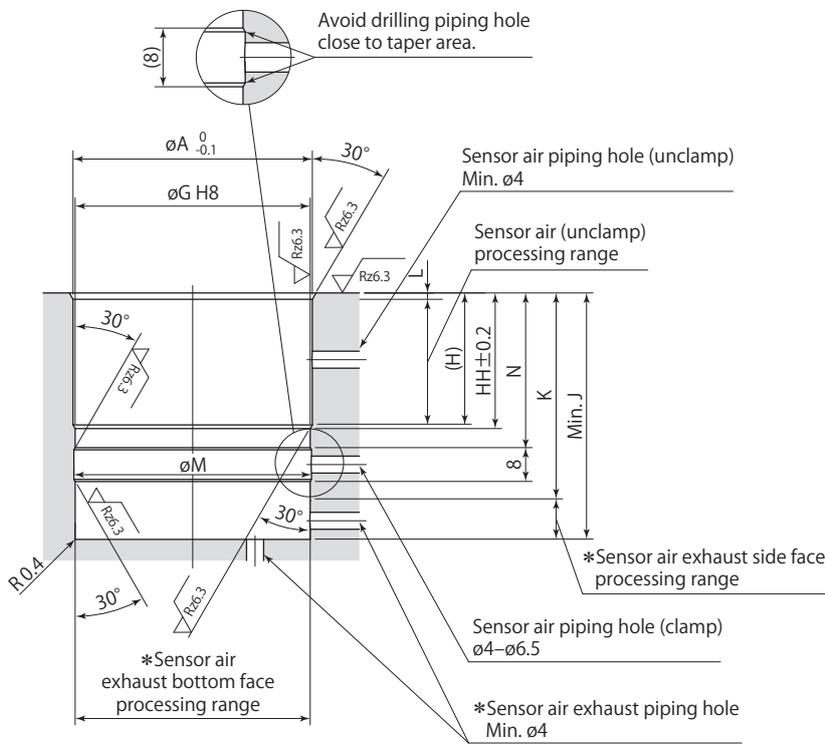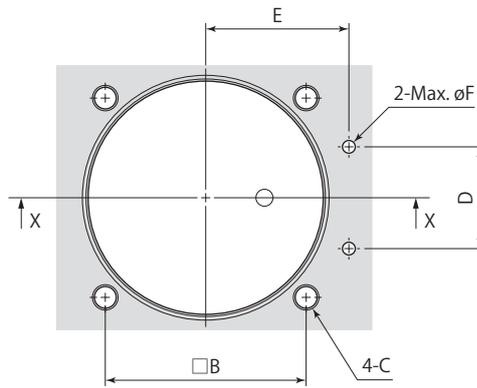


In through hole X-X

In blind hole X-X

Rz: ISO4287(1997)

- Apply an appropriate amount of grease to the chamfer and the bore when mounting. Excessive grease may be a blockage in the air passage, causing malfunction of the sensor.
- The 30° taper machining must be provided to avoid the damage of the O-ring. Ensure that there are no interference on taper area when drilling the hole for sensor air.

- The sensor air piping hole can be used for a pilot hole of Rc 1/16 plug.

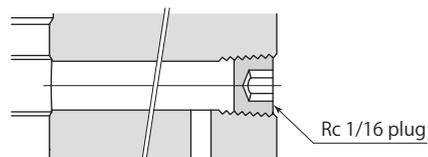



- Refer to **page →25** for caution for piping.

Mounting details



Model	CTM04-□S10T	CTM05-□S10T	CTM06-□S10T	CTM10-□S10T	CTM16-□S10T
∅A	40.8	49	56	66	76
B	34	40	47	55	63
C	M5	M5	M6	M6	M8
D	18	22	24	30	32
E	26	30	33.5	39.5	45
∅F	3	3	3	5	5
∅G	40 ^{+0.039} ₀	48 ^{+0.039} ₀	55 ^{+0.046} ₀	65 ^{+0.046} ₀	75 ^{+0.046} ₀
H	29.5	25	31.5	34	39
HH	30.2	25.9	32.4	34.9	39.9
J	53.5	51.5	58.5	63.5	69.5
K	46.5	42.5	49	51.5	56.5
L	1.2	1.5	1.5	1.5	1.5
∅M	40.6	48.6	55.6	65.6	75.6
N	34	30	36.5	39	44

Model	CTM04-□S20T	CTM05-□S20T	CTM06-□S20T	CTM10-□S20T	CTM16-□S20T
H	39.5	35	41.5	44	49
HH	40.2	35.9	42.4	44.9	49.9
J	68.5	66.5	73.5	78.5	87.5
K	56.5	52.5	59	61.5	66.5
N	44	40	46.5	49	54

Model	CTM06-□S30T	CTM10-□S30T	CTM16-□S30T
H	51.5	54	59
HH	52.4	54.9	59.9
J	93.5	98.5	107.5
K	69	71.5	76.5
N	56.5	59	64

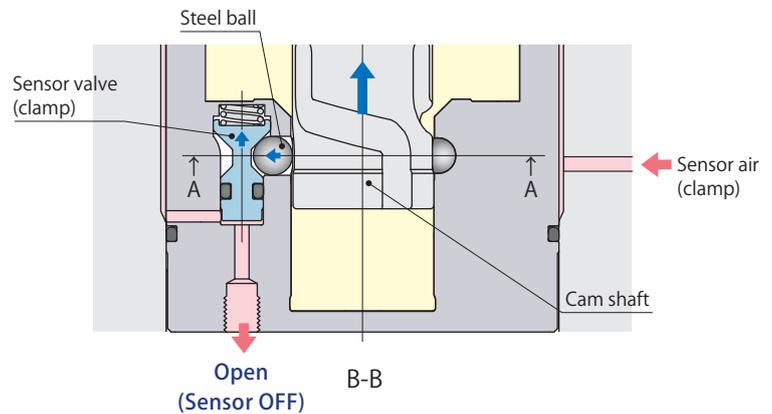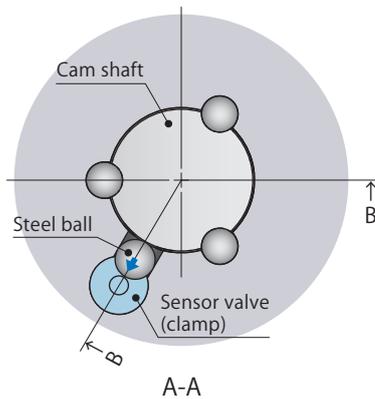Clamp PAL sensor function and structureIn the middle of swing stroke


- The sensor valve (clamp) is pushed up by the steel ball to open for air exhaust while piston rod swing strokes.

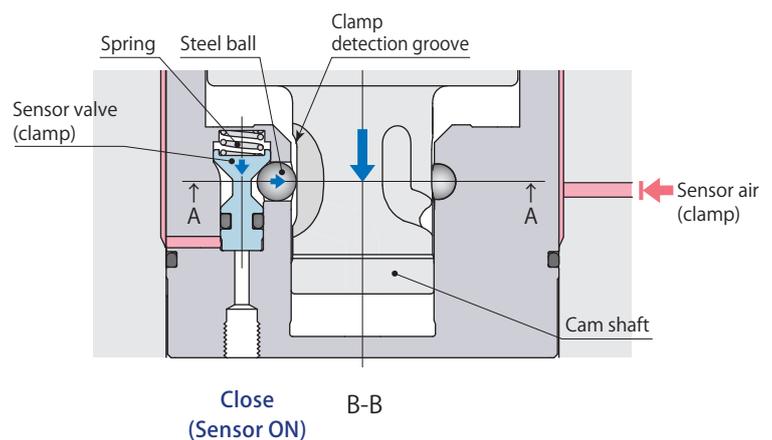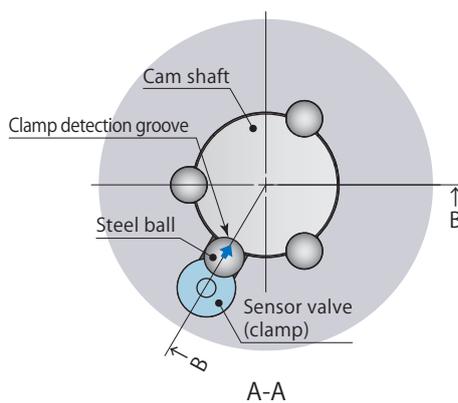Clamp detection

- The steel ball seats in the clamp detection groove when the cam shaft reaches clamping point, and a sensor valve (clamp) is pushed down to shut of the sensor air by a spring, and detects the clamped condition.


Clamp PAL sensor function and structure

Over clamp stroke (Incomplete clamp) detection

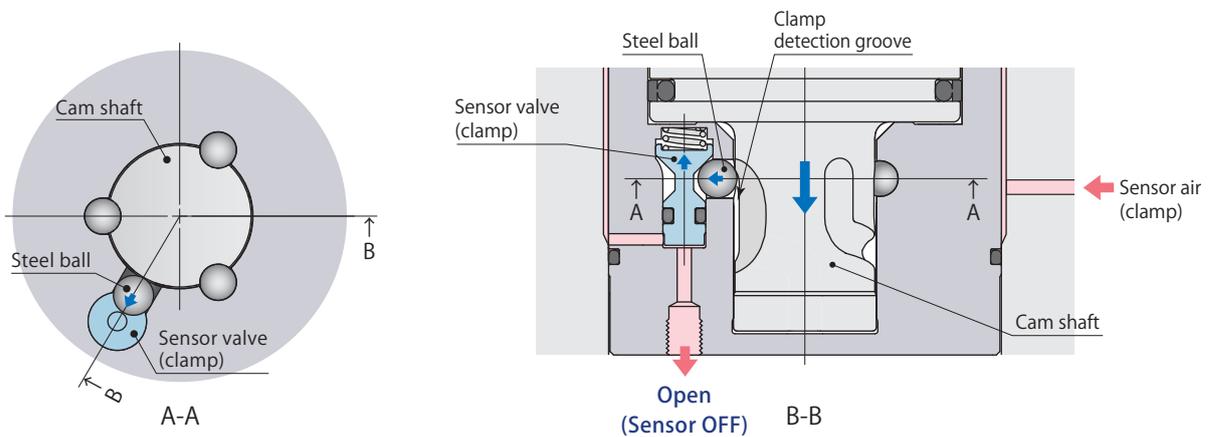

- When the cam shaft passes the clamping point, the sensor valve (clamp) is pushed up by the steel ball to open for air exhaust, and detects the over clamp stroked condition.

Over clamp stroke (Incomplete clamp) detection example

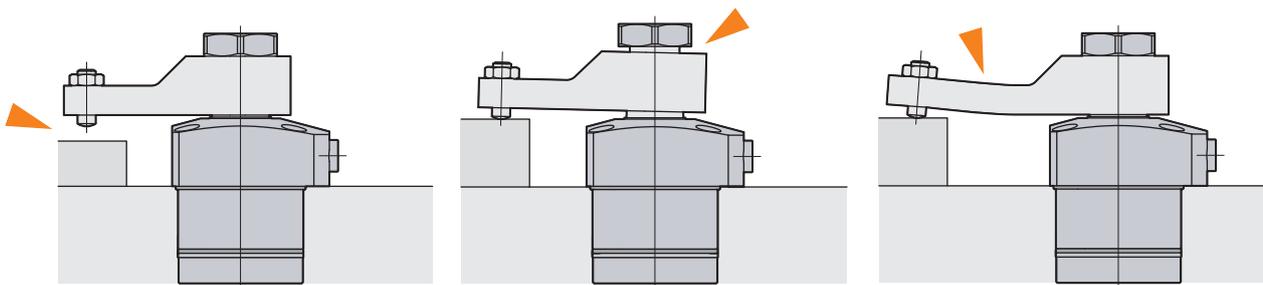


- Clamp disabled due to mis-setting workpiece.
- Clamp disabled due to the damage of piston rod or loose clamp arm.
- Clamp disabled due to the deflection of clamp arm.
- Clamp disabled due to the abrasion on the tip of clamp arm during prolonged use.

Clamp, Over clamp stroke detection signal


Sensing Swing clamp
Clamp sensor model
CTM-C

Unclamp

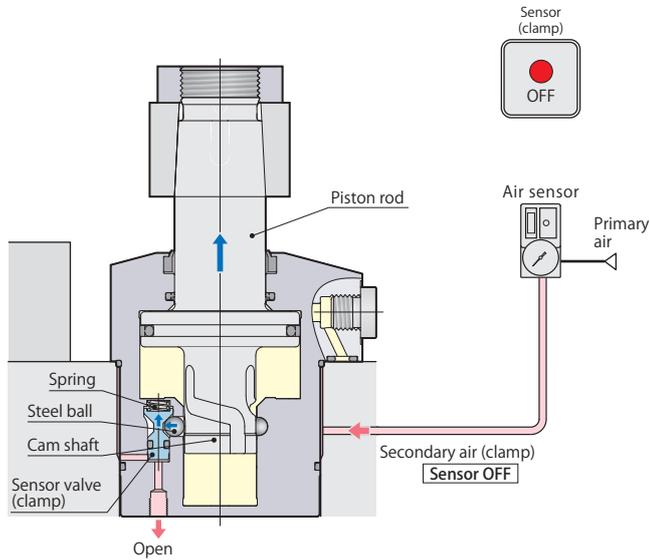


Sensor signal (clamp)	OFF	Unclamp
-----------------------	-----	---------

In the middle of swing stroke

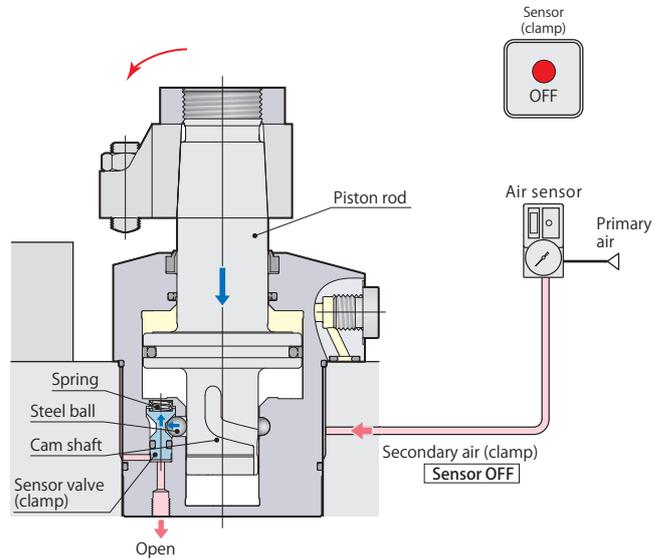


Sensor signal (clamp)	OFF	In the middle of swing stroke
-----------------------	-----	-------------------------------

Clamp detection

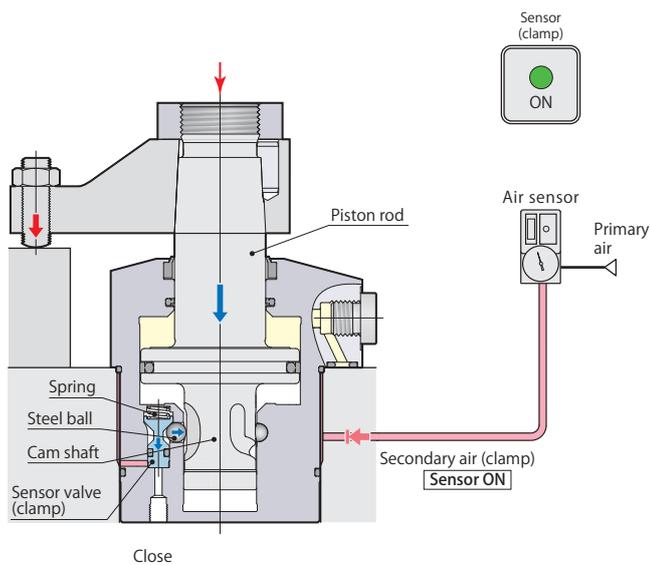


Sensor signal (clamp)	ON	Clamp
-----------------------	----	-------

Over clamp stroke (Incomplete clamp) detection

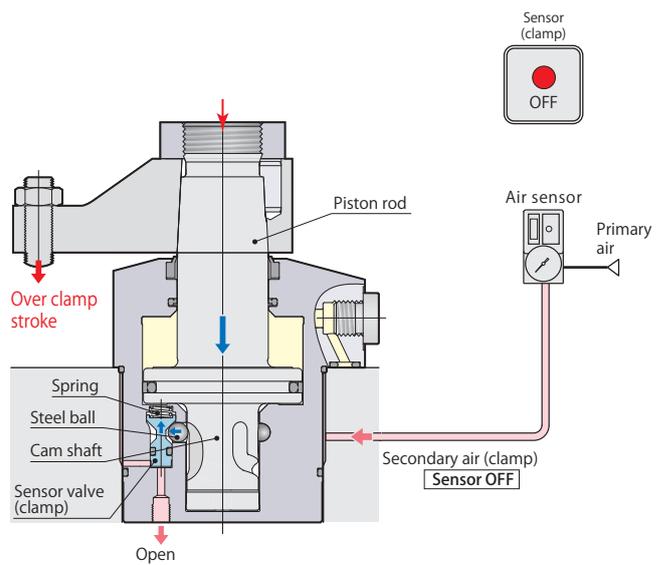

Sensor signal (clamp)	OFF	Over clamp stroke (Incomplete clamp)
-----------------------	-----	--------------------------------------

Air sensor triggering point

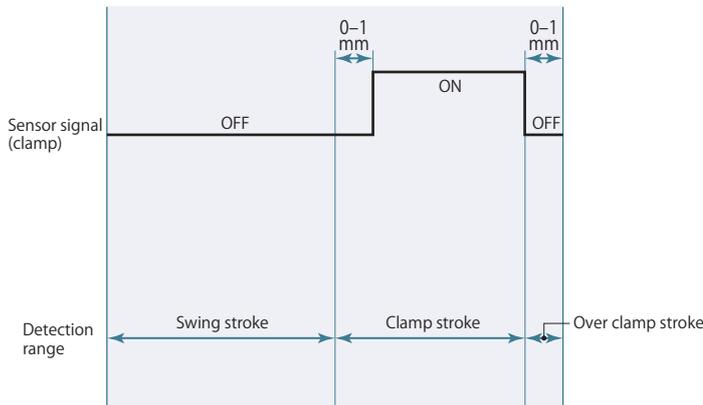


- Refer to the sensor supplier's instruction manual for the details of setting.
- Sensing performance such as detectable time and pressure differs depending on the supplier and model number of the sensor. Select the right model referring to sensor's application and characteristics.

Air sensor unit recommended condition of use

Supplier and model	ISA3-F/G series manufactured by SMC GPS2-05, GPS3-E series manufactured by CKD
Air supply pressure	0.1–0.2 MPa
Inner diameter of piping	ø4 mm (ISA3-F:ø2.5 mm)
Overall piping length	5 m or less

- Supply the dry and filtered air. Particulate size $5\ \mu\text{m}$ or less is recommended.
- Use a solenoid valve with needle for air sensor unit and control it supplying air all the time in order to eliminate intrusion of chips or coolant.
- There is a case that air sensing cannot be successfully made as designed when it is used out of the above usage. Contact Technical service center for more details.

Relation between sensor air pressure, PAL sensor and piston stroke

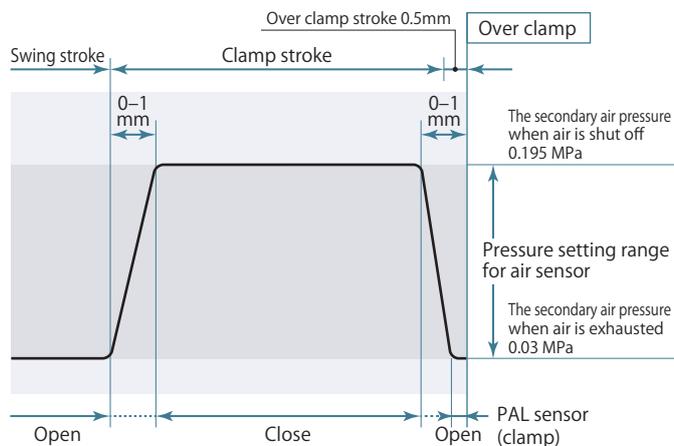


The diagram shown above indicates the relation between the PAL sensor, piston stroke, and secondary air pressure. (The pressure shown in the diagram is a reference based on the 0.2 MPa of primary air pressure for one piece of clamp.)

Since the new PAL sensor works with less air-leakage compared to previous sensor valve,


- Enhances the pressure setting range of the sensor which enables the sensor to set easily. (Ex. Pressure setting range 0.03–0.195 MPa in the diagram)
- Allows the use for a number of clamps by one air sensor because of better pressure holding when air is shut off. (Maximum number of clamps to be detected by one sensor is 10.)
- Allows to choose less air-consumed, i.e. small orifice diameter type, air sensor.
- Can create large differential-pressure when opening and closing the PAL sensor so that sensor primary pressure can be set as low as possible and reduce the consumption of air.

New PAL sensor

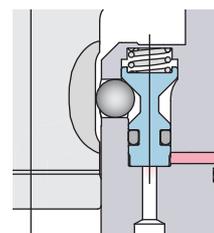

Poppet structure ensures superior sealing performance and can create large differential-pressure when the valve is opening and closing, and air leakage can be minimized.


Previous sensor valve

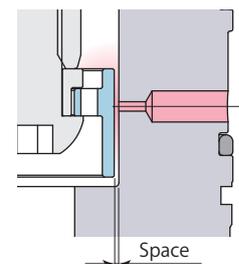

Air leaks easily due to a large space.

Dimensions



CTM□-□S10C

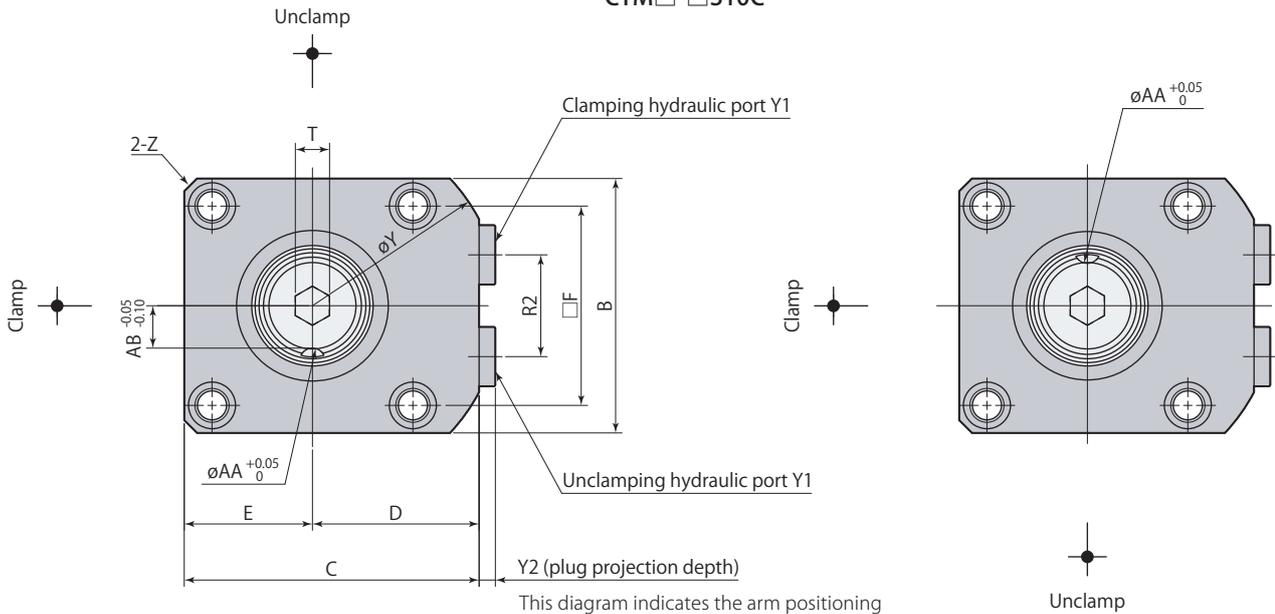

This diagram indicates the arm positioning pin groove at unclamped condition.

Swing direction L (counter-clockwise)

Swing direction R (clockwise)

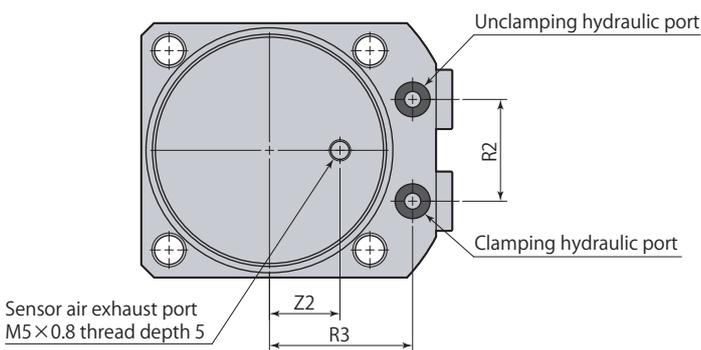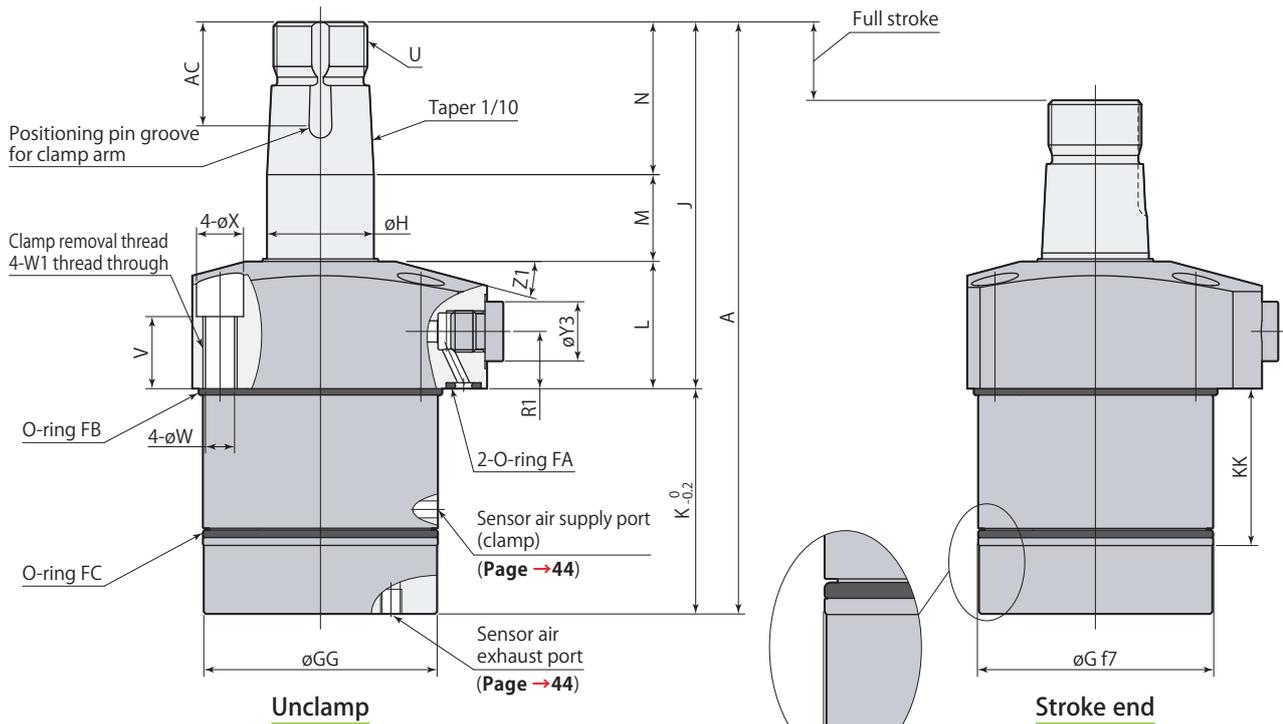

- Hex nut for arm mount is included.
- Refer to **page →72** for the details of perfect nut.
- Clamp arm, positioning pin and mounting screws are not included.

Model		CTM04-□S10C	CTM05-□S10C	CTM06-□S10C	CTM10-□S10C	CTM16-□S10C
Cylinder capacity (cm ³)	Clamp	8.5	12.5	19.6	27.4	45.7
	Unclamp	12.8	19.4	28.9	41.9	67.9
A		118.5	125.5	139.5	151	175
B		45	51	60	70	80
C		54	61	69	81	92
D		31.5	35.5	39	46	52
E		22.5	25.5	30	35	40
F		34	40	47	55	63
øG		40 ^{-0.025 -0.050}	48 ^{-0.025 -0.050}	55 ^{-0.030 -0.060}	65 ^{-0.030 -0.060}	75 ^{-0.030 -0.060}
øGG		39.7	47.6	54.6	64.6	74.6
øH		18	22	25	30	35.5
J		70.5	79.5	86.5	93	108
K		48	46	53	58	67
KK		34.5	30	36.5	39	44
L		25	28	30	31	38
M		18.5	19.5	20.5	22	24
N		27	32	36	40	46
P		8	9	10	11	11
R1		12.5	14	13.5	14	16
R2		18	22	24	30	32
R3		26	30	33.5	39.5	45
S (nut width across flats)		24	30	32	41	46
T (hex socket)		6	8	8	10	10
U		M16×1.5	M20×1.5	M22×1.5	M27×1.5	M30×1.5
V		15	17.5	17	17	21
øW		5.5	5.5	6.8	6.8	9
W1		M6×1	M6×1	M8×1.25	M8×1.25	M10×1.5
øX		9	9	11	11	14
øY		73	83	88	106	116
Y1		G1/8	G1/8	G1/8	G1/8	G1/4
Y2		3.8	3.8	3.8	3.8	4.8
øY3		14	14	14	14	19
Z		C3	C3	C3	C4	C5
Z1		12°	15°	15°	15°	15°
Z2		11	13.5	16.5	19	22.5
øAA (pin groove diameter)		4	5	6	6	8
AB		7	9	10	12.5	14
AC		18.5	21.5	24.5	27.5	28.5
Positioning pin (dowel pin)		ø4(h8)×10	ø5(h8)×12	ø6(h8)×14	ø6(h8)×16	ø8(h8)×16
O-ring FA (fluorocarbon hardness Hs90)		P5	P5	P5	P7	P7
O-ring FB (fluorocarbon hardness Hs70)		38×1.5 (inner diameter×thickness)	AS568-031	AS568-034	AS568-037	AS568-040
O-ring FC (fluorocarbon hardness Hs70)		AS568-028	AS568-031	AS568-033	AS568-036	AS568-039
Taper sleeve		CTH04-MS	CTH05-MS	CTH06-MS	CTH10-MS	CTH16-MS
Flow control valve*	Meter-in	VCF01S	VCF01S	VCF01S	VCF01	VCF02
	Meter-out	VCF01S-O	VCF01S-O	VCF01S-O	VCF01-O	VCF02-O
Air bleeding valve*		VCE01	VCE01	VCE01	VCE01	VCE02


*: Select the right model of VCF and VCE according to the size of the clamp.

Refer to each page for the details of options.

● Taper sleeve page →70 ● Flow control valve page →94 ● Air bleeding valve page →96

Dimensions

CTM□-□S20C

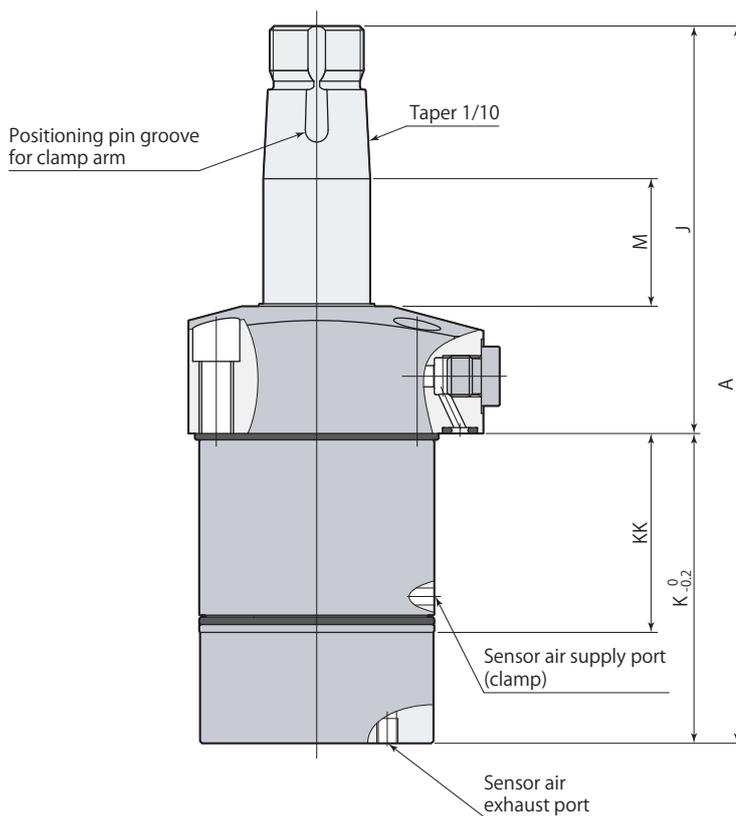

Unclamp

Model		CTM04-□S20C	CTM05-□S20C	CTM06-□S20C	CTM10-□S20C	CTM16-□S20C
Cylinder capacity (cm ³)	Clamp	13.5	19.5	29.9	40.7	66.0
	Unclamp	20.4	30.1	44.1	62.3	98.1
A		148.5	155.5	169.5	181	205
J		80.5	89.5	96.5	103	118
K		68	66	73	78	87
KK		44.5	40	46.5	49	54
M		28.5	29.5	30.5	32	34

mm

● Refer to **pages →40, 41** for other dimensions that are not shown in the diagram.


Refer to each page for the details of options.

● Taper sleeve **page →70** ● Flow control valve **page →94** ● Air bleeding valve **page →96**

● This product is made to order.

Dimensions

CTM□-□S30C

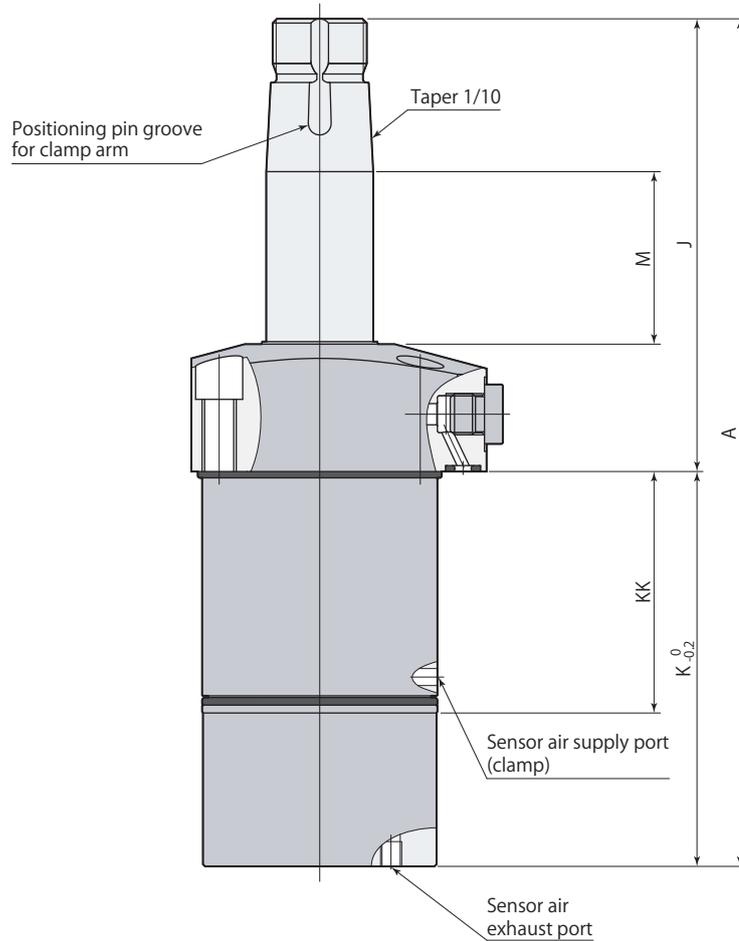

Unclamp




Model		CTM06-□S30C	CTM10-□S30C	CTM16-□S30C
Cylinder capacity (cm ³)	Clamp	40.2	54.1	86.2
	Unclamp	59.3	82.7	128.3
A		199.5	211	235
J		106.5	113	128
K		93	98	107
KK		56.5	59	64
M		40.5	42	44

● Refer to **pages →40, 41** for other dimensions that are not shown in the diagram.

Refer to each page for the details of options.

● Taper sleeve **page →70** ● Flow control valve **page →94** ● Air bleeding valve **page →96**

● This product is made to order.

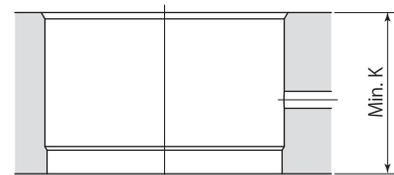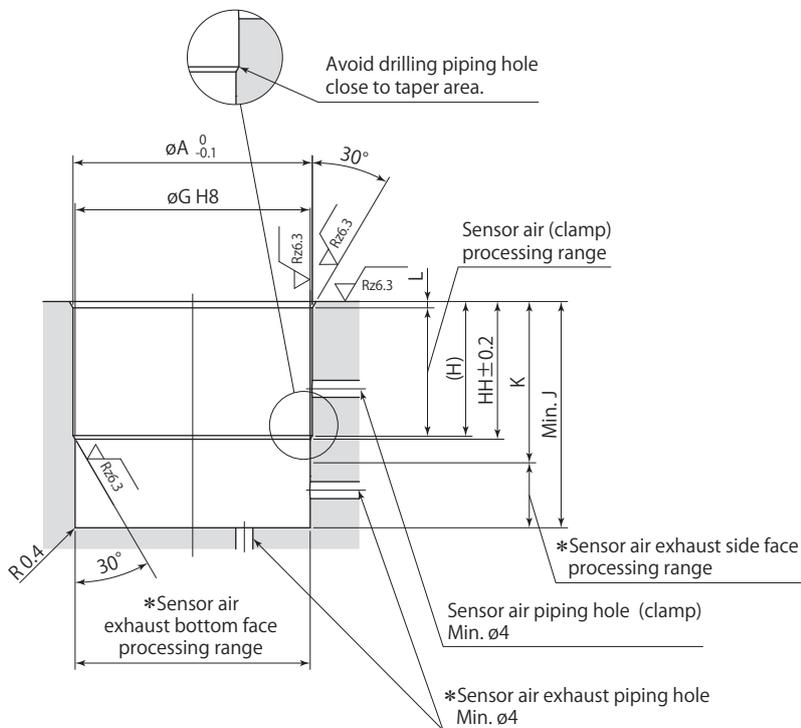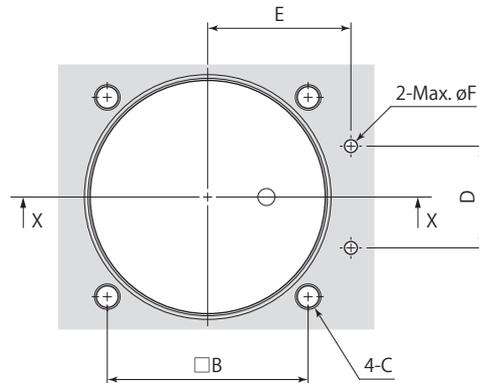Mounting detailsIn through hole X-XIn blind hole X-X

*: Sensor air exhaust piping hole must be made on either side or bottom face.

Rz: ISO4287(1997)

- Apply an appropriate amount of grease to the chamfer and the bore when mounting. Excessive grease may be a blockage in the air passage, causing malfunction of the sensor.
- The 30° taper machining must be provided to avoid the damage of the O-ring. Ensure that there are no interference on taper area when drilling the hole for sensor air.
- Refer to **page →39** for caution for piping.

Mounting details

mm

Model	CTM04-□S10C	CTM05-□S10C	CTM06-□S10C	CTM10-□S10C	CTM16-□S10C
øA	40.8	49	56	66	76
B	34	40	47	55	63
C	M5	M5	M6	M6	M8
D	18	22	24	30	32
E	26	30	33.5	39.5	45
øF	3	3	3	5	5
øG	40 ^{+0.039} ₀	48 ^{+0.039} ₀	55 ^{+0.046} ₀	65 ^{+0.046} ₀	75 ^{+0.046} ₀
H	29.5	25	31.5	34	39
HH	30.2	25.9	32.4	34.9	39.9
J	48.5	46.5	53.5	58.5	67.5
K	34.5	30	36.5	39	44
L	1.2	1.5	1.5	1.5	1.5

mm



Model	CTM04-□S20C	CTM05-□S20C	CTM06-□S20C	CTM10-□S20C	CTM16-□S20C
H	39.5	35	41.5	44	49
HH	40.2	35.9	42.4	44.9	49.9
J	68.5	66.5	73.5	78.5	87.5
K	44.5	40	46.5	49	54

mm

Model	CTM06-□S30C	CTM10-□S30C	CTM16-□S30C
H	51.5	54	59
HH	52.4	54.9	59.9
J	93.5	98.5	107.5
K	56.5	59	64



Unclamp PAL sensor function and structure

Unclamp detection

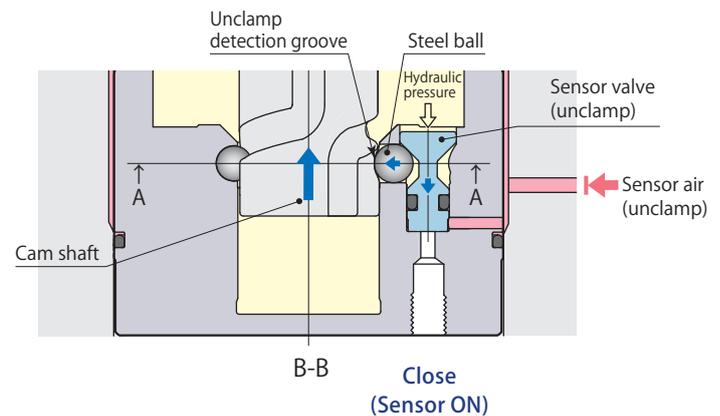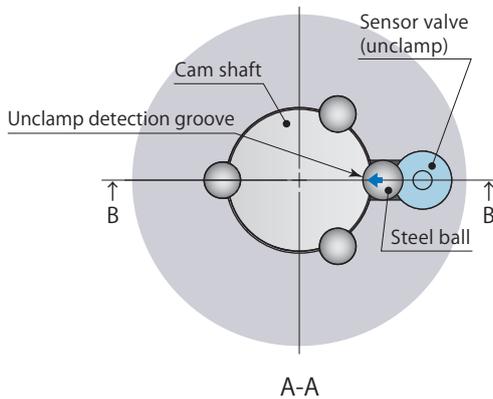

- The steel ball seats in the unclamp detection groove when the cam shaft reaches unclamp end, and a sensor valve (unclamp) is pushed down to shut off the sensor air by hydraulic force, and detects the unclamped condition.


In the middle of stroke

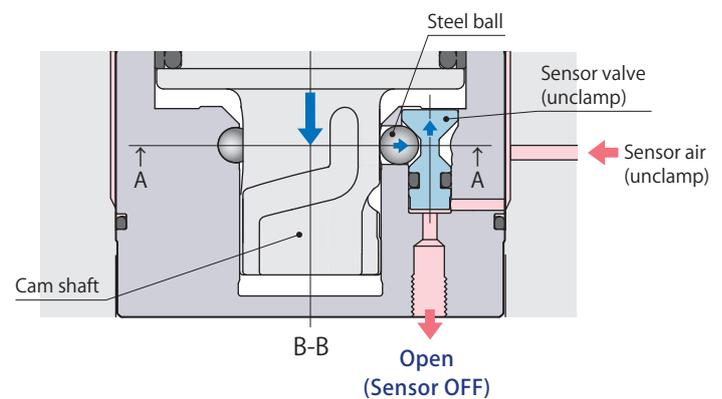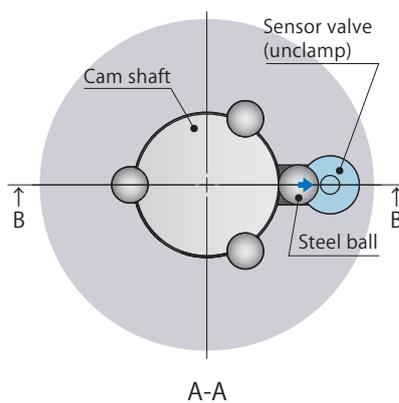

- When the cam shaft lowers, the sensor valve (unclamp) is pushed up by the steel ball to open for air exhaust.


Unclamp detection signal

Unclamp detection

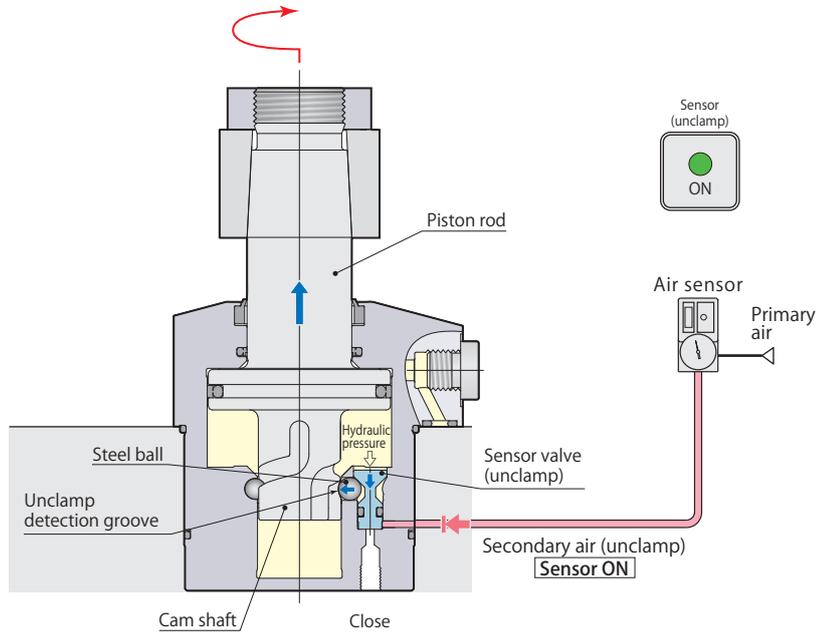


Sensor signal (unclamp)	ON	Unclamp
-------------------------	-----------	----------------

In the middle of stroke

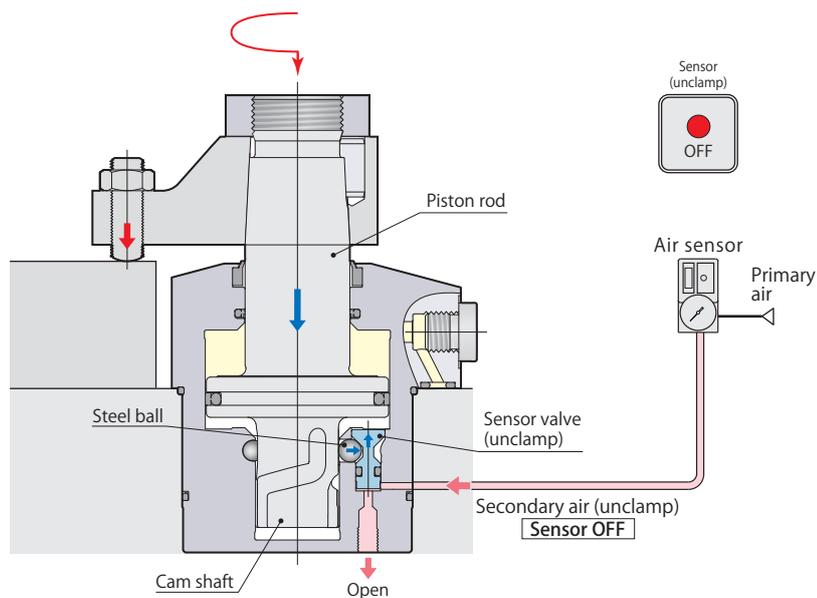

Sensor signal (unclamp)	OFF	Clamp, in the middle of stroke
-------------------------	------------	---------------------------------------

Air sensor triggering point

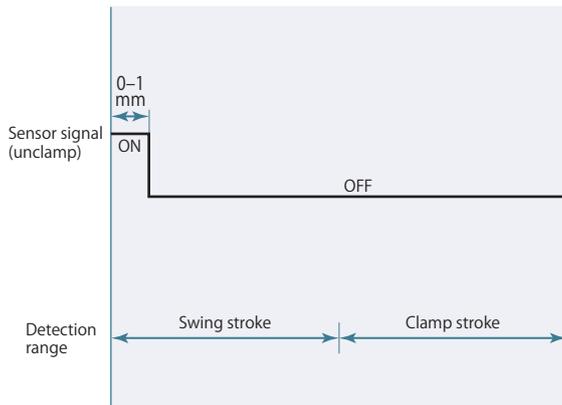


- Refer to the sensor supplier's instruction manual for the details of setting.
- Sensing performance such as detectable time and pressure differs depending on the supplier and model number of the sensor. Select the right model referring to sensor's application and characteristics.

Air sensor unit recommended condition of use

Supplier and model	ISA3-F/G series manufactured by SMC GPS2-05, GPS3-E series manufactured by CKD
Air supply pressure	0.1–0.2 MPa
Inner diameter of piping	ø4 mm (ISA3-F:ø2.5 mm)
Overall piping length	5 m or less

- Supply the dry and filtered air. Particulate size $5\ \mu\text{m}$ or less is recommended.
- Use a solenoid valve with needle for air sensor unit and control it supplying air all the time in order to eliminate intrusion of chips or coolant.
- There is a case that air sensing cannot be successfully made as designed when it is used out of the above usage. Contact Technical service center for more details.

Relation between sensor air pressure, PAL sensor and piston stroke

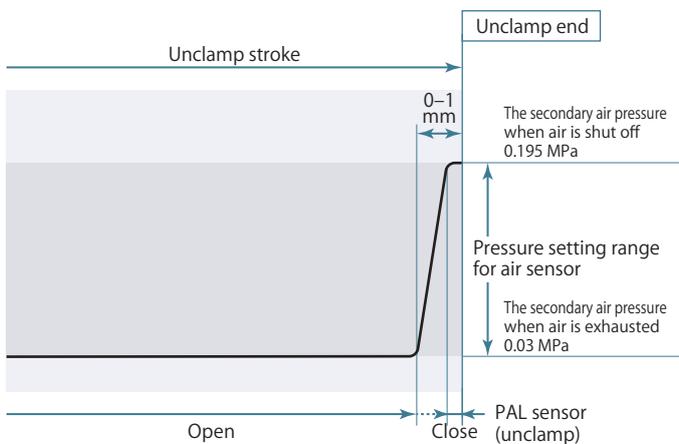


The diagram shown above indicates the relation between the PAL sensor, piston stroke, and secondary air pressure. (The pressure shown in the diagram is a reference based on the 0.2 MPa of primary air pressure for one piece of clamp.)

Since the new PAL sensor works with less air-leakage compared to previous sensor valve,


- Enhances the pressure setting range of the sensor which enables the sensor to set easily. (Ex. Pressure setting range 0.03–0.195 MPa in the diagram)
- Allows the use for a number of clamps by one air sensor because of better pressure holding when air is shut off. (Maximum number of clamps to be detected by one sensor is 10.)
- Allows to choose less air-consumed, i.e. small orifice diameter type, air sensor.
- Can create large differential-pressure when opening and closing the PAL sensor so that sensor primary pressure can be set as low as possible and reduce the consumption of air.

New PAL sensor

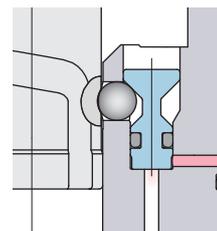

Poppet structure ensures superior sealing performance and can create large differential-pressure when the valve is opening and closing, and air leakage can be minimized.


Previous sensor valve

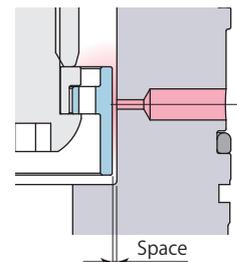

Air leaks easily due to a large space.

Dimensions



CTM□-□S10B

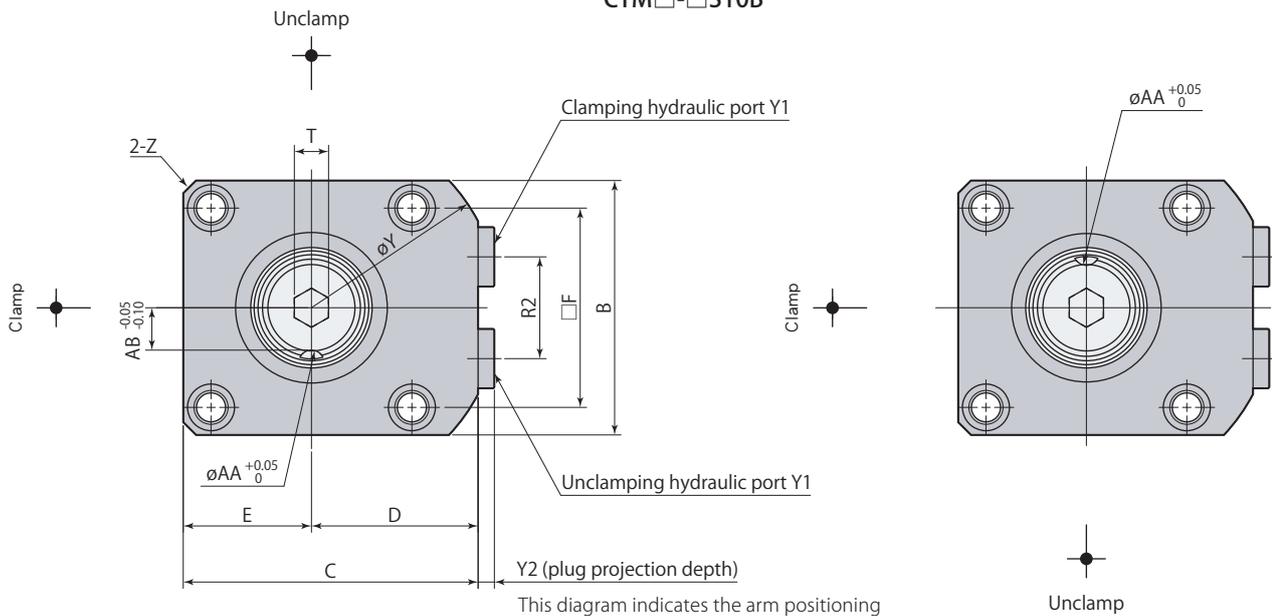

This diagram indicates the arm positioning pin groove at unclamped condition.

Swing direction L (counter-clockwise)

Swing direction R (clockwise)

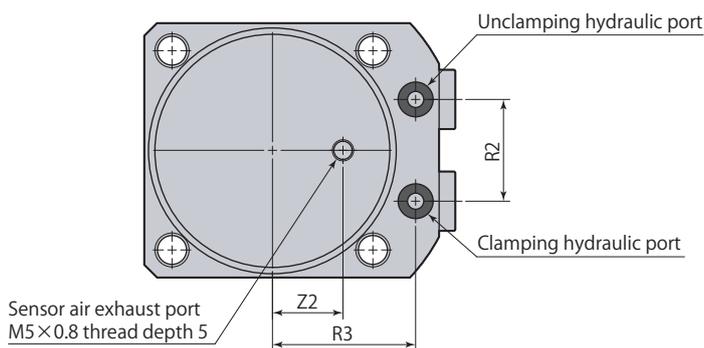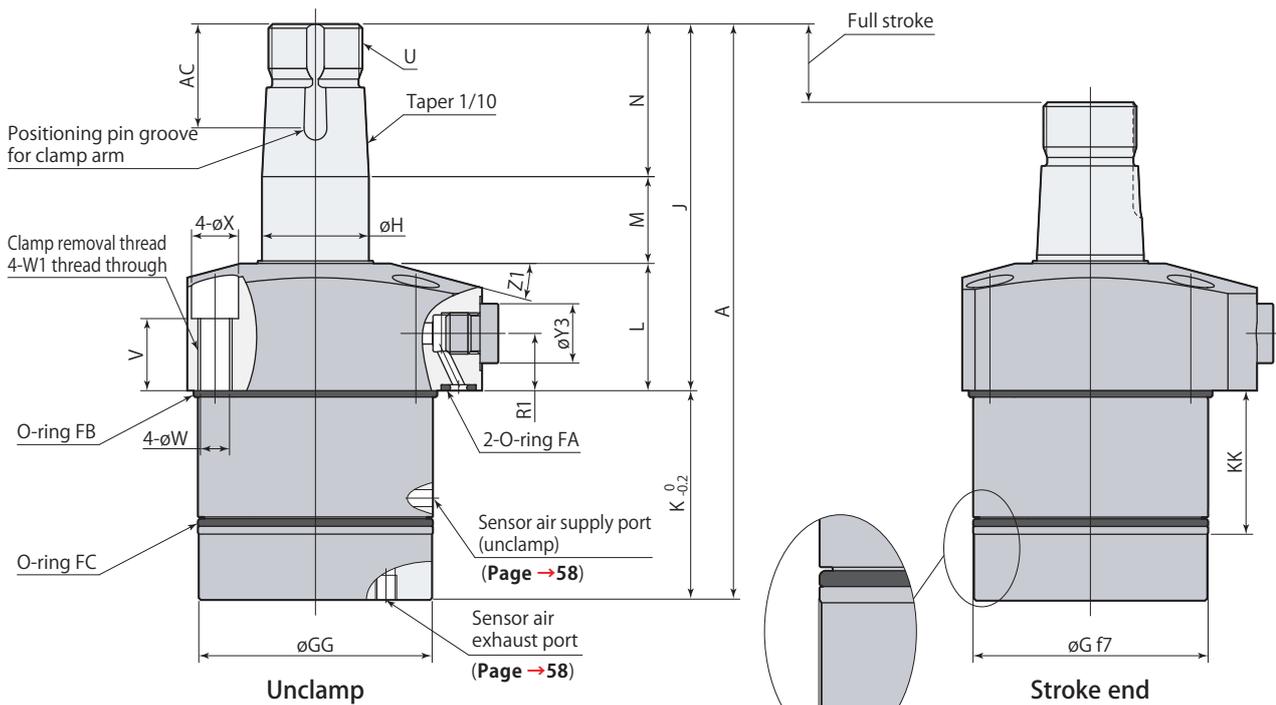

- Hex nut for arm mount is included.
- Refer to **page →72** for the details of perfect nut.
- Clamp arm, positioning pin and mounting screws are not included.

Model		CTM04-□S10B	CTM05-□S10B	CTM06-□S10B	CTM10-□S10B	CTM16-□S10B
Cylinder capacity (cm ³)	Clamp	8.3	12.2	19.0	26.7	44.6
	Unclamp	12.5	18.8	28.1	40.9	66.4
A		114.5	122.5	136	147.5	172.5
B		45	51	60	70	80
C		54	61	69	81	92
D		31.5	35.5	39	46	52
E		22.5	25.5	30	35	40
F		34	40	47	55	63
øG		40 ^{-0.025 -0.050}	48 ^{-0.025 -0.050}	55 ^{-0.030 -0.060}	65 ^{-0.030 -0.060}	75 ^{-0.030 -0.060}
øGG		39.7	47.6	54.6	64.6	74.6
øH		18	22	25	30	35.5
J		70.5	79.5	86.5	93	108
K		44	43	49.5	54.5	64.5
KK		31	27.5	33.5	36	42
L		25	28	30	31	38
M		18.5	19.5	20.5	22	24
N		27	32	36	40	46
P		8	9	10	11	11
R1		12.5	14	13.5	14	16
R2		18	22	24	30	32
R3		26	30	33.5	39.5	45
S (nut width across flats)		24	30	32	41	46
T (hex socket)		6	8	8	10	10
U		M16×1.5	M20×1.5	M22×1.5	M27×1.5	M30×1.5
V		15	17.5	17	17	21
øW		5.5	5.5	6.8	6.8	9
W1		M6×1	M6×1	M8×1.25	M8×1.25	M10×1.5
øX		9	9	11	11	14
øY		73	83	88	106	116
Y1		G1/8	G1/8	G1/8	G1/8	G1/4
Y2		3.8	3.8	3.8	3.8	4.8
øY3		14	14	14	14	19
Z		C3	C3	C3	C4	C5
Z1		12°	15°	15°	15°	15°
Z2		11	13.5	16.5	19	22.5
øAA (pin groove diameter)		4	5	6	6	8
AB		7	9	10	12.5	14
AC		18.5	21.5	24.5	27.5	28.5
Positioning pin (dowel pin)		ø4(h8)×10	ø5(h8)×12	ø6(h8)×14	ø6(h8)×16	ø8(h8)×16
O-ring FA (fluorocarbon hardness Hs90)		P5	P5	P5	P7	P7
O-ring FB (fluorocarbon hardness Hs70)		38×1.5 (inner diameter×thickness)	AS568-031	AS568-034	AS568-037	AS568-040
O-ring FC (fluorocarbon hardness Hs70)		AS568-028	AS568-031	AS568-033	AS568-036	AS568-039
Taper sleeve		CTH04-MS	CTH05-MS	CTH06-MS	CTH10-MS	CTH16-MS
Flow control valve*	Meter-in	VCF01S	VCF01S	VCF01S	VCF01	VCF02
	Meter-out	VCF01S-O	VCF01S-O	VCF01S-O	VCF01-O	VCF02-O
Air bleeding valve*		VCE01	VCE01	VCE01	VCE01	VCE02


*: Select the right model of VCF and VCE according to the size of the clamp.

Refer to each page for the details of options.

● Taper sleeve page →70 ● Flow control valve page →94 ● Air bleeding valve page →96

Dimensions

CTM□-□S20B

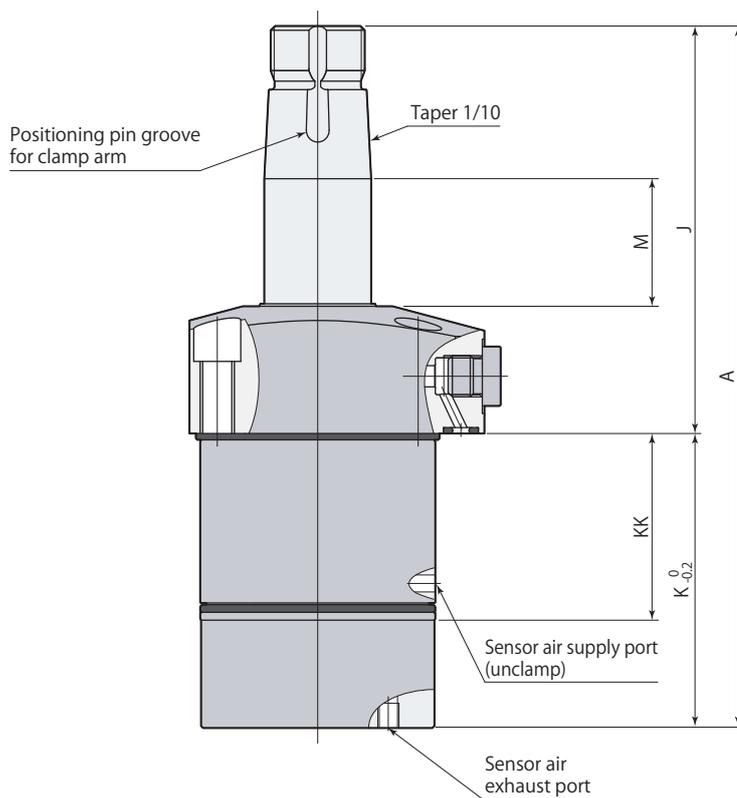

Unclamp

Model		CTM04-□S20B	CTM05-□S20B	CTM06-□S20B	CTM10-□S20B	CTM16-□S20B
Cylinder capacity (cm ³)	Clamp	13.3	19.1	29.3	40.1	64.9
	Unclamp	20.0	29.6	43.3	61.3	96.6
A		144.5	152.5	166	177.5	202.5
J		80.5	89.5	96.5	103	118
K		64	63	69.5	74.5	84.5
KK		41	37.5	43.5	46	52
M		28.5	29.5	30.5	32	34

mm


● Refer to **pages →54, 55** for other dimensions that are not shown in the diagram.

Refer to each page for the details of options.

● Taper sleeve **page →70** ● Flow control valve **page →94** ● Air bleeding valve **page →96**

Dimensions

CTM□-□S30B

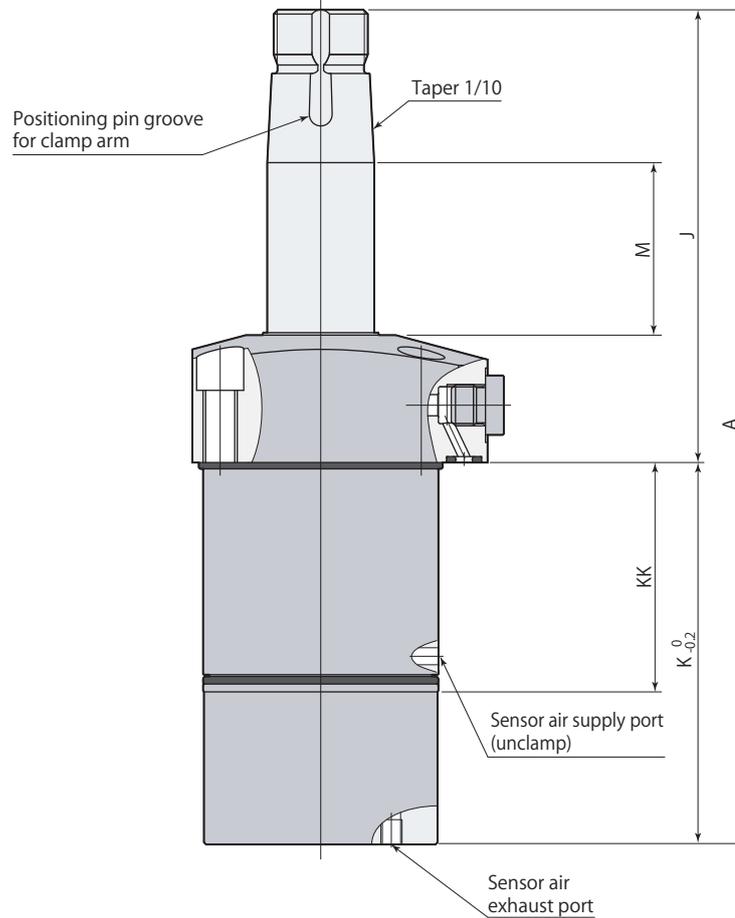

Unclamp




Model		CTM06-□S30B	CTM10-□S30B	CTM16-□S30B
Cylinder capacity (cm ³)	Clamp	39.6	53.4	85.2
	Unclamp	58.5	81.7	126.8
A		196	207.5	232.5
J		106.5	113	128
K		89.5	94.5	104.5
KK		53.5	56	62
M		40.5	42	44

● Refer to **pages →54, 55** for other dimensions that are not shown in the diagram.

Refer to each page for the details of options.

● Taper sleeve **page →70** ● Flow control valve **page →94** ● Air bleeding valve **page →96**

Mounting details

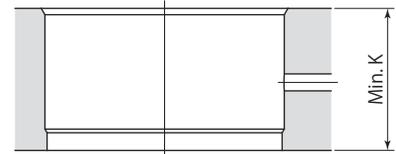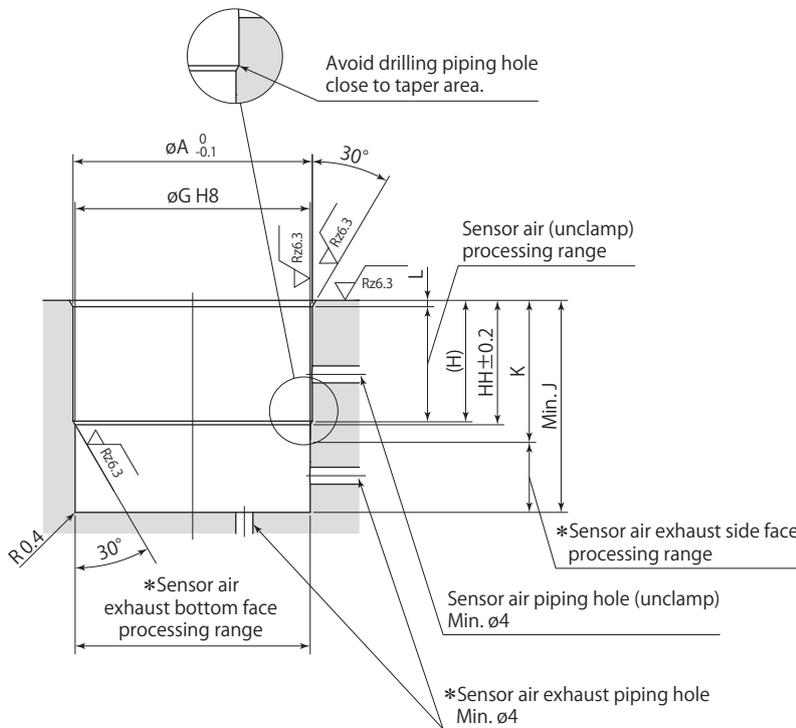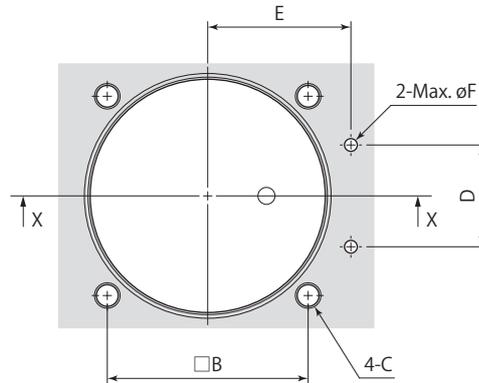

In through hole X-X

In blind hole X-X

Rz: ISO4287(1997)

* : Sensor air exhaust piping hole must be made on either side or bottom face.

- Apply an appropriate amount of grease to the chamfer and the bore when mounting. Excessive grease may be a blockage in the air passage, causing malfunction of the sensor.
- The 30° taper machining must be provided to avoid the damage of the O-ring. Ensure that there are no interference on taper area when drilling the hole for sensor air.
- Refer to **page →53** for caution for piping.

Mounting details


Model	CTM04-□S10B	CTM05-□S10B	CTM06-□S10B	CTM10-□S10B	CTM16-□S10B
∅A	40.8	49	56	66	76
B	34	40	47	55	63
C	M5	M5	M6	M6	M8
D	18	22	24	30	32
E	26	30	33.5	39.5	45
∅F	3	3	3	5	5
∅G	40 ^{+0.039} ₀	48 ^{+0.039} ₀	55 ^{+0.046} ₀	65 ^{+0.046} ₀	75 ^{+0.046} ₀
H	26	22.5	28.5	31	37
HH	26.7	23.4	29.4	31.9	37.9
J	44.5	43.5	50	55	65
K	31	27.5	33.5	36	42
L	1.2	1.5	1.5	1.5	1.5

Model	CTM04-□S20B	CTM05-□S20B	CTM06-□S20B	CTM10-□S20B	CTM16-□S20B
H	36	32.5	38.5	41	47
HH	36.7	33.4	39.4	41.9	47.9
J	64.5	63.5	70	75	85
K	41	37.5	43.5	46	52

Model	CTM06-□S30B	CTM10-□S30B	CTM16-□S30B
H	48.5	51	57
HH	49.4	51.9	57.9
J	90	95	105
K	53.5	56	62




Dimensions

CTM□-□S10N

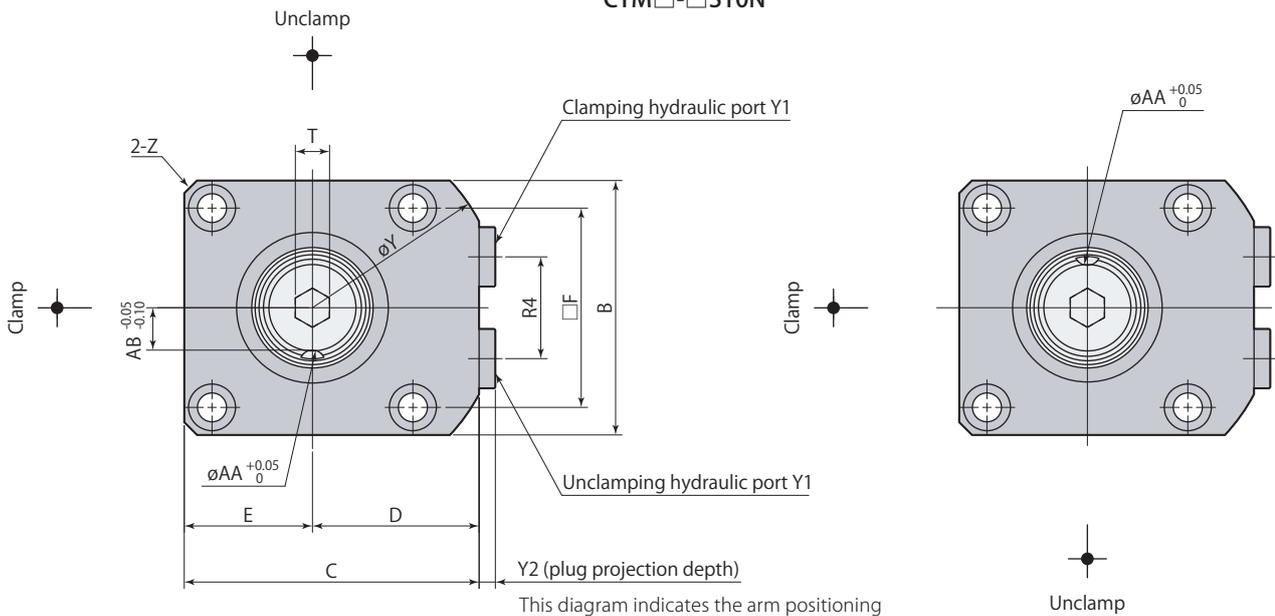

Swing direction L (counter-clockwise)

Swing direction R (clockwise)

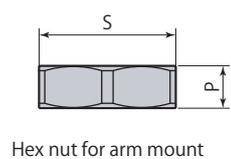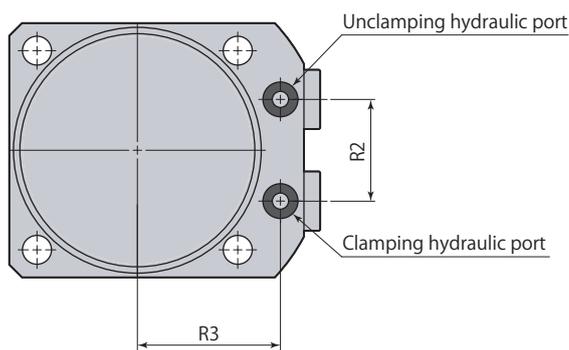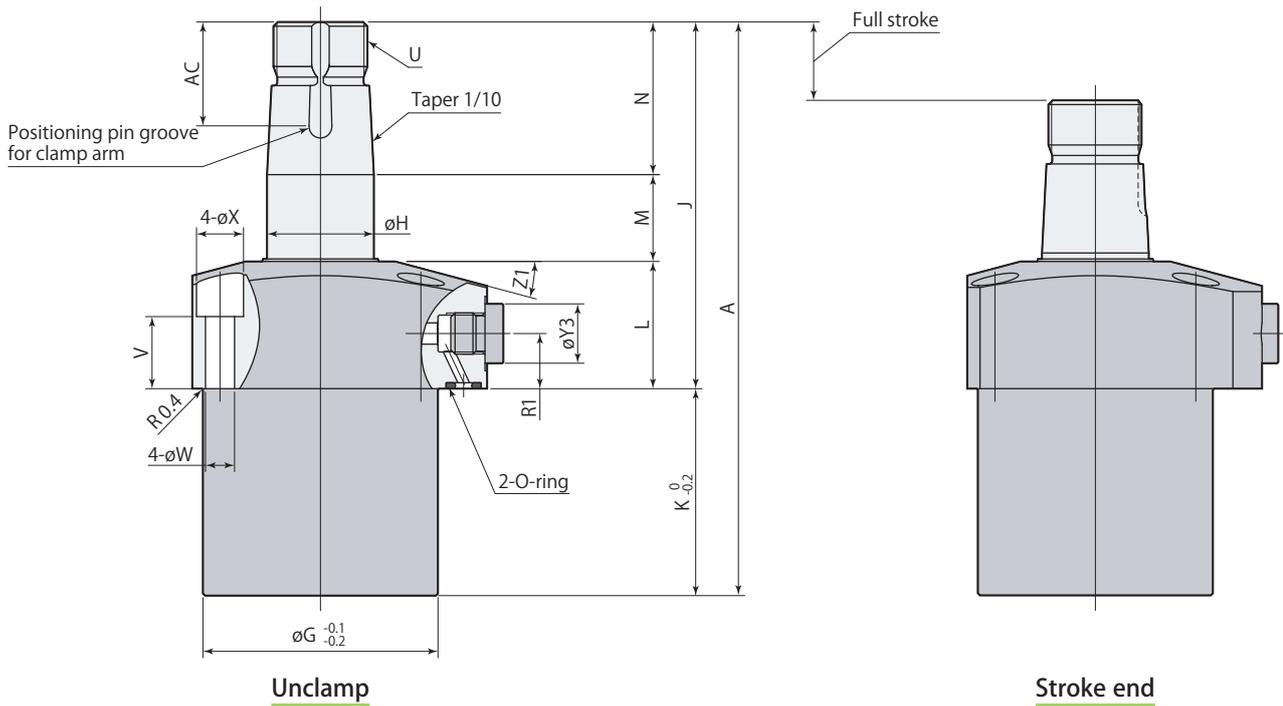

- Hex nut for arm mount is included.
- Refer to **page →72** for the details of perfect nut.
- Clamp arm, positioning pin and mounting screws are not included.

Model		CTM03-□S10N	CTM04-□S10N	CTM05-□S10N	CTM06-□S10N	CTM10-□S10N	CTM16-□S10N
Cylinder capacity (cm ³)	Clamp	5.5	8.3	12.2	19.0	26.7	44.6
	Unclamp	8.2	12.5	18.8	28.1	40.9	66.4
A		107	114.5	122.5	136	147.5	172.5
B		40	45	51	60	70	80
C		49	54	61	69	81	92
D		29	31.5	35.5	39	46	52
E		20	22.5	25.5	30	35	40
F		31.4	34	40	47	55	63
øG		36	40	48	55	65	75
øH		15	18	22	25	30	35.5
J		66.5	70.5	79.5	86.5	93	108
K		40.5	44	43	49.5	54.5	64.5
L		25	25	28	30	31	38
M		17.5	18.5	19.5	20.5	22	24
N		24	27	32	36	40	46
P		7	8	9	10	11	11
R1		12	12.5	14	13.5	14	16
R2		16	18	22	24	30	32
R3		23.5	26	30	33.5	39.5	45
R4		18	18	22	24	30	32
S (nut width across flats)		22	24	30	32	41	46
T (hex socket)		5	6	8	8	10	10
U		M14×1.5	M16×1.5	M20×1.5	M22×1.5	M27×1.5	M30×1.5
V		16	15	17.5	17	17	21
øW		4.5	5.5	5.5	6.8	6.8	9
øX		7.5	9	9	11	11	14
øY		66	73	83	88	106	116
Y1		G1/8	G1/8	G1/8	G1/8	G1/8	G1/4
Y2		3.8	3.8	3.8	3.8	3.8	4.8
øY3		14	14	14	14	14	19
Z		C2	C3	C3	C3	C4	C5
Z1		15°	12°	15°	15°	15°	15°
øAA (pin groove diameter)		4	4	5	6	6	8
AB		6	7	9	10	12.5	14
AC		17.5	18.5	21.5	24.5	27.5	28.5
Positioning pin (dowel pin)		ø4(h8)×10	ø4(h8)×10	ø5(h8)×12	ø6(h8)×14	ø6(h8)×16	ø8(h8)×16
O-ring (fluorocarbon hardness Hs90)		P5	P5	P5	P5	P7	P7
Taper sleeve		CTH03-MS	CTH04-MS	CTH05-MS	CTH06-MS	CTH10-MS	CTH16-MS
Flow control valve*	Meter-in	VCF01S	VCF01S	VCF01S	VCF01S	VCF01	VCF02
	Meter-out	VCF01S-O	VCF01S-O	VCF01S-O	VCF01S-O	VCF01-O	VCF02-O
Air bleeding valve*		VCE01	VCE01	VCE01	VCE01	VCE01	VCE02

*: Select the right model of VCF and VCE according to the size of the clamp.

Refer to each page for the details of options.


● Taper sleeve page →70

● Flow control valve page →94

● Air bleeding valve page →96

Dimensions

CTM□-□S20N

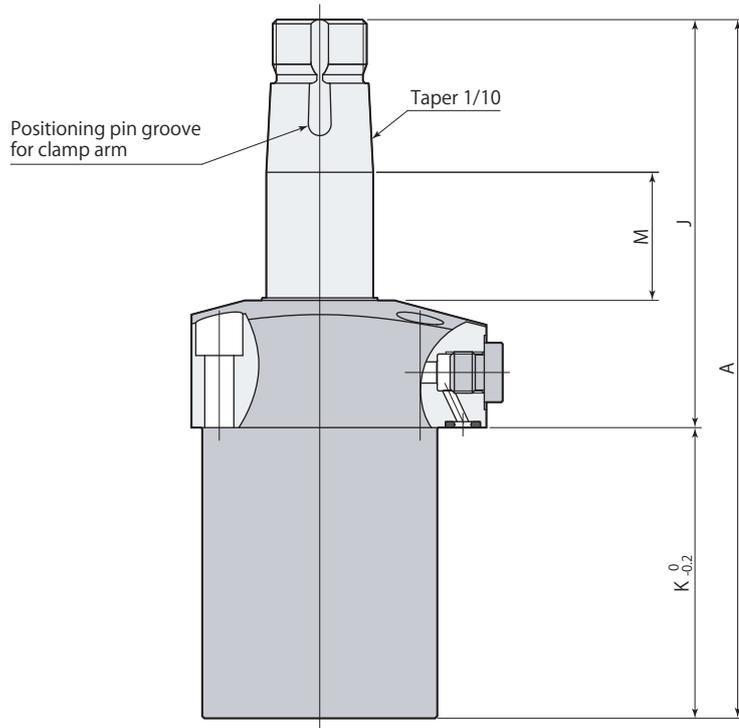

Unclamp

Model		CTM03-□S20N	CTM04-□S20N	CTM05-□S20N	CTM06-□S20N	CTM10-□S20N	CTM16-□S20N
Cylinder capacity (cm ³)	Clamp	9.0	13.3	19.1	29.3	40.1	64.9
	Unclamp	13.5	20.0	29.6	43.3	61.3	96.6
A		137	144.5	152.5	166	177.5	202.5
J		76.5	80.5	89.5	96.5	103	118
K		60.5	64	63	69.5	74.5	84.5
M		27.5	28.5	29.5	30.5	32	34

mm


● Refer to **pages →64, 65** for other dimensions that are not shown in the diagram.

Refer to each page for the details of options.

● Taper sleeve **page →70** ● Flow control valve **page →94** ● Air bleeding valve **page →96**

Dimensions

CTM□-□S30N

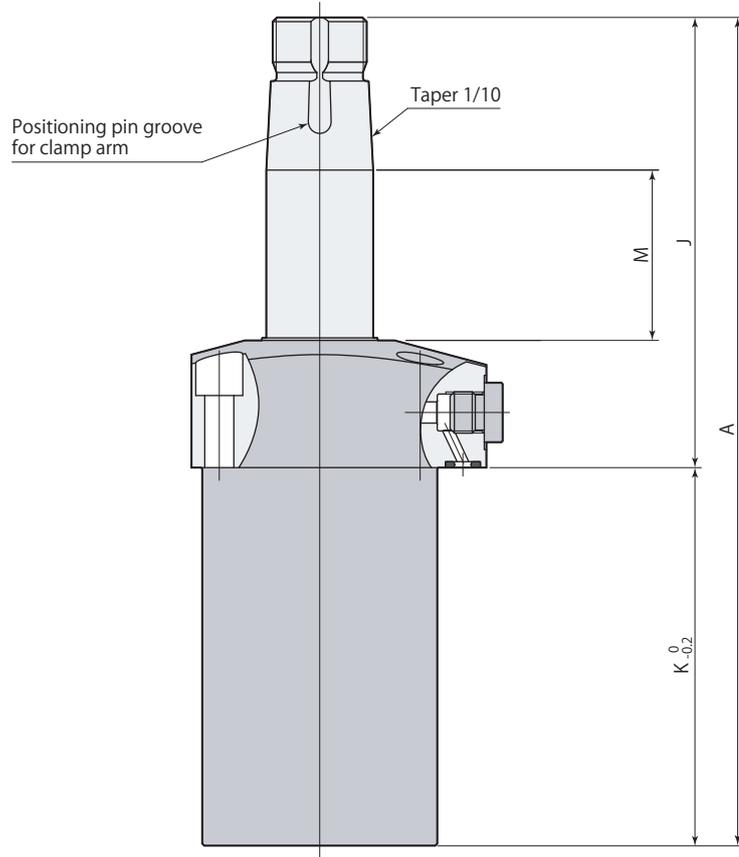

Unclamp



Model		CTM06-□S30N	CTM10-□S30N	CTM16-□S30N
Cylinder capacity (cm ³)	Clamp	39.6	53.4	85.2
	Unclamp	58.5	81.7	126.8
A		196	207.5	232.5
J		106.5	113	128
K		89.5	94.5	104.5
M		40.5	42	44

● Refer to **pages →64, 65** for other dimensions that are not shown in the diagram.

Refer to each page for the details of options.

● Taper sleeve **page →70** ● Flow control valve **page →94** ● Air bleeding valve **page →96**

Mounting details

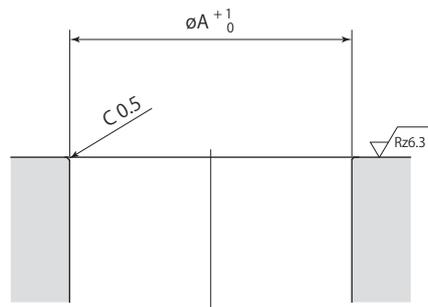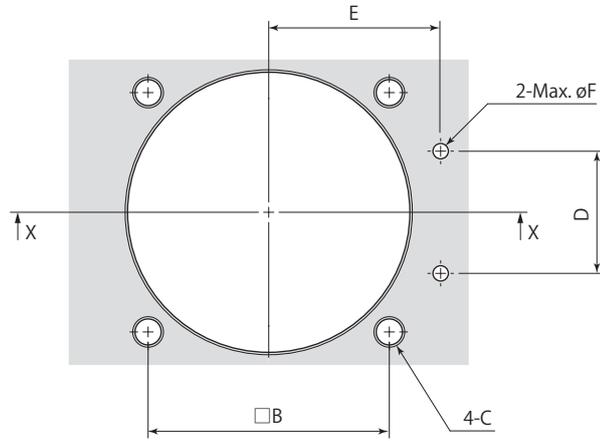

X-X


Rz: ISO4287(1997)

Model	CTM03-□S□N	CTM04-□S□N	CTM05-□S□N	CTM06-□S□N	CTM10-□S□N	CTM16-□S□N
øA	36	40	48	55	65	75
B	31.4	34	40	47	55	63
C	M4	M5	M5	M6	M6	M8
D	16	18	22	24	30	32
E	23.5	26	30	33.5	39.5	45
øF	3	3	3	3	5	5

mm

Clamp arm mounting details

Clamp arm is not included. Manufacture a clamp arm with the dimensions shown in the table below.

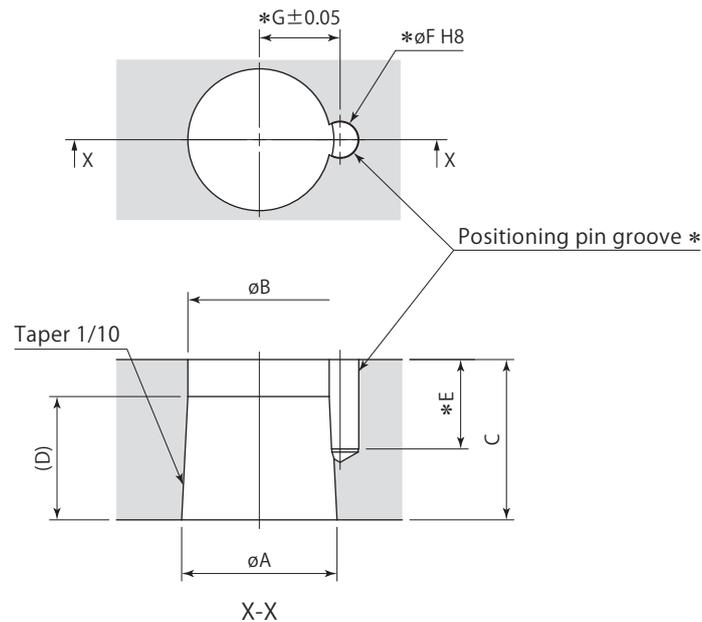

*: No need to machine the pin groove (E, ϕF , G) unless positioning pin is used for the arm.
The positioning pin enables a clamp arm to locate on the clamp firmly and easily.

Swing clamp	CTM03	CTM04	CTM05	CTM06	CTM10	CTM16
ϕA	15 ^{-0.016} _{-0.034}	18 ^{-0.016} _{-0.034}	22 ^{-0.020} _{-0.041}	25 ^{-0.020} _{-0.041}	30 ^{-0.020} _{-0.041}	35.5 ^{-0.025} _{-0.050}
ϕB	14.1	16.5	20.5	23	28	(32)
C	17	19	23	26	29	35
D	9	15	15	20	20	–
E	10.5	10.5	12.5	14.5	16.5	17.5
ϕF (pin groove diameter)	4 ^{+0.018} ₀	4 ^{+0.018} ₀	5 ^{+0.018} ₀	6 ^{+0.018} ₀	6 ^{+0.018} ₀	8 ^{+0.022} ₀
G	8	9	11.5	13	15.5	18

mm

Taper sleeve

Size

03

04

05




06

10

16

CTH

— MS : Taper sleeve

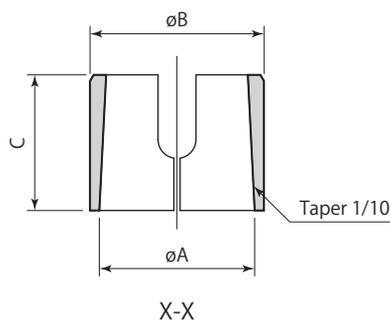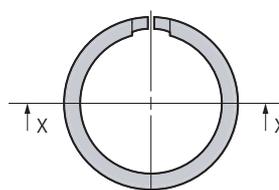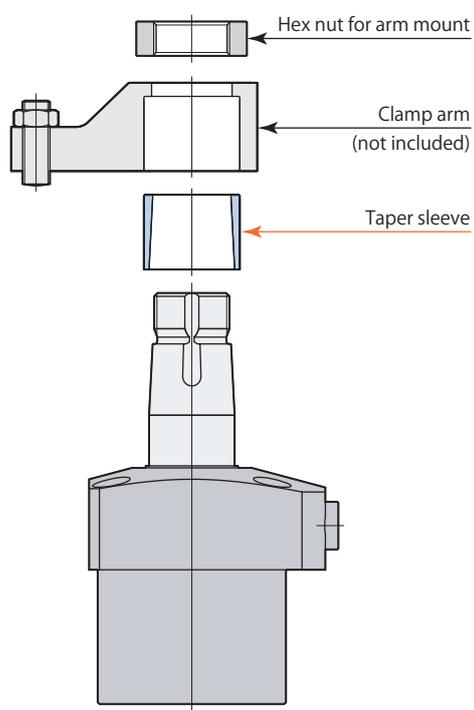


Taper sleeve	CTH03-MS	CTH04-MS	CTH05-MS	CTH06-MS	CTH10-MS	CTH16-MS
Applicable swing clamp	CTM03	CTM04	CTM05	CTM06	CTM10	CTM16
ϕA	15	18	22	25	30	35.5
ϕB	17	20	25	28	34	40
C	14	16	19	22	25	31

mm

Clamp arm mounting details

(Using taper sleeve)

Clamp arm is not included. Manufacture a clamp arm with the dimensions shown in the table below.

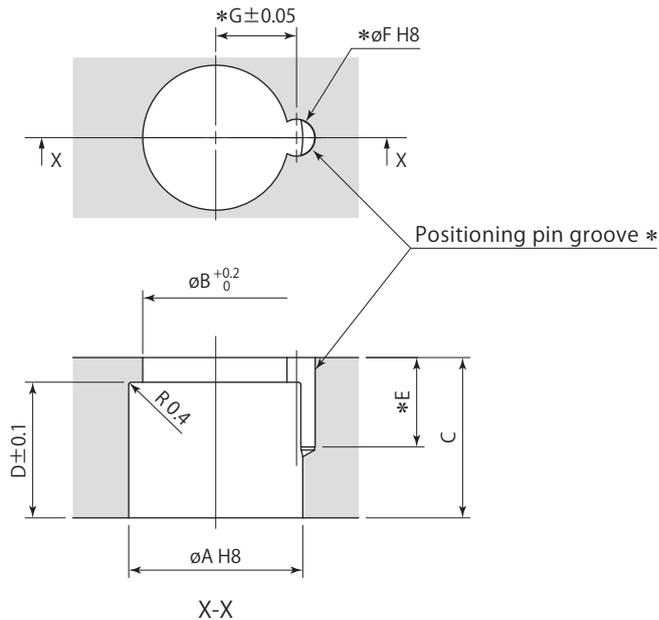

* : No need to machine the pin groove (E, ϕF , G) unless positioning pin is used for the arm.
The positioning pin enables a clamp arm to locate on the clamp firmly and easily.

Taper sleeve	CTH03-MS	CTH04-MS	CTH05-MS	CTH06-MS	CTH10-MS	CTH16-MS
Applicable swing clamp	CTM03	CTM04	CTM05	CTM06	CTM10	CTM16
ϕA	17 ^{+0.027} ₀	20 ^{+0.033} ₀	25 ^{+0.033} ₀	28 ^{+0.033} ₀	34 ^{+0.039} ₀	40 ^{+0.039} ₀
ϕB	15	17	21	23.5	29	33
C	17	19	23	26	29	35
D	14	16	19	22	25	31
E	10.5	10.5	12.5	14.5	16.5	17.5
ϕF (pin groove diameter)	4 ^{+0.018} ₀	4 ^{+0.018} ₀	5 ^{+0.018} ₀	6 ^{+0.018} ₀	6 ^{+0.018} ₀	8 ^{+0.022} ₀
G	8	9	11.5	13	15.5	18

mm